


Moeller SK0211-1149GB

Description		Part number
Communication		
Coupling unit enabling remote expansion	up to 30 m	EASY200-EASY
PC connection cable	For easy500/700	EASY-PC-CAB
PC connection cable	For easy800 and MFD units	EASY800-PC-CAB
Cable for EASY-NET connection	Length 30 cm	EASY-NT-30
	Length 80 cm	EASY-NT-80
	Length 1.5 m	EASY-NT-150
Plug for EASY-NET bus termination	2 required per network installation	EASY-NT-R
Communication with other networks		
AS-interface slave connection	Addresses available 0 to 31	EASY205-ASI
PROFIBUS DP slave connection	Addresses available 1 to 126	EASY204-DP
CANopen interface	Addresses available 1 to 127	EASY221-CO
DeviceNet interface	Addresses available 0 to 63	EASY222-DN
ETHERNET gateway (multi-protocol)	Allows programming and data access	EASY209-SE
Power supplies		
	24 V DC, 1.25 A	EASY400-POW
	Dual output: 24 V DC, 250 mA and 12 V DC, 20 mA	EASY200-POW
Power supply unit/communication modules		
	24 V DC for use with easy500/700	MFD-CP4-500
	100 - 240 V AC for use with easy500/700	MFD-AC-CP4-500
	24 V DC for use with easy800/MFD-CP8..	MFD-CP4-800
	100 - 240 V AC for use with easy800/MFD-CP8..	MFD-AC-CP4-800
Memory modules		
	For easy500/700	EASY-M-32K
	For easy800 and MFD units	EASY-M-256K
Software		
	For easy500/700	EASY-SOFT-BASIC
	For easy500/700/800 and MFD displays	EASY-SOFT-PRO
Accessories		
Mounting rail	For MFD expansion	MFD-TS-144
Manuals		
easy500/700 instruction manual		AWB2528-1508-GB
easy800 instruction manual		AWB2528-1423-GB
MFD instruction manual		AWB2528-1480GB

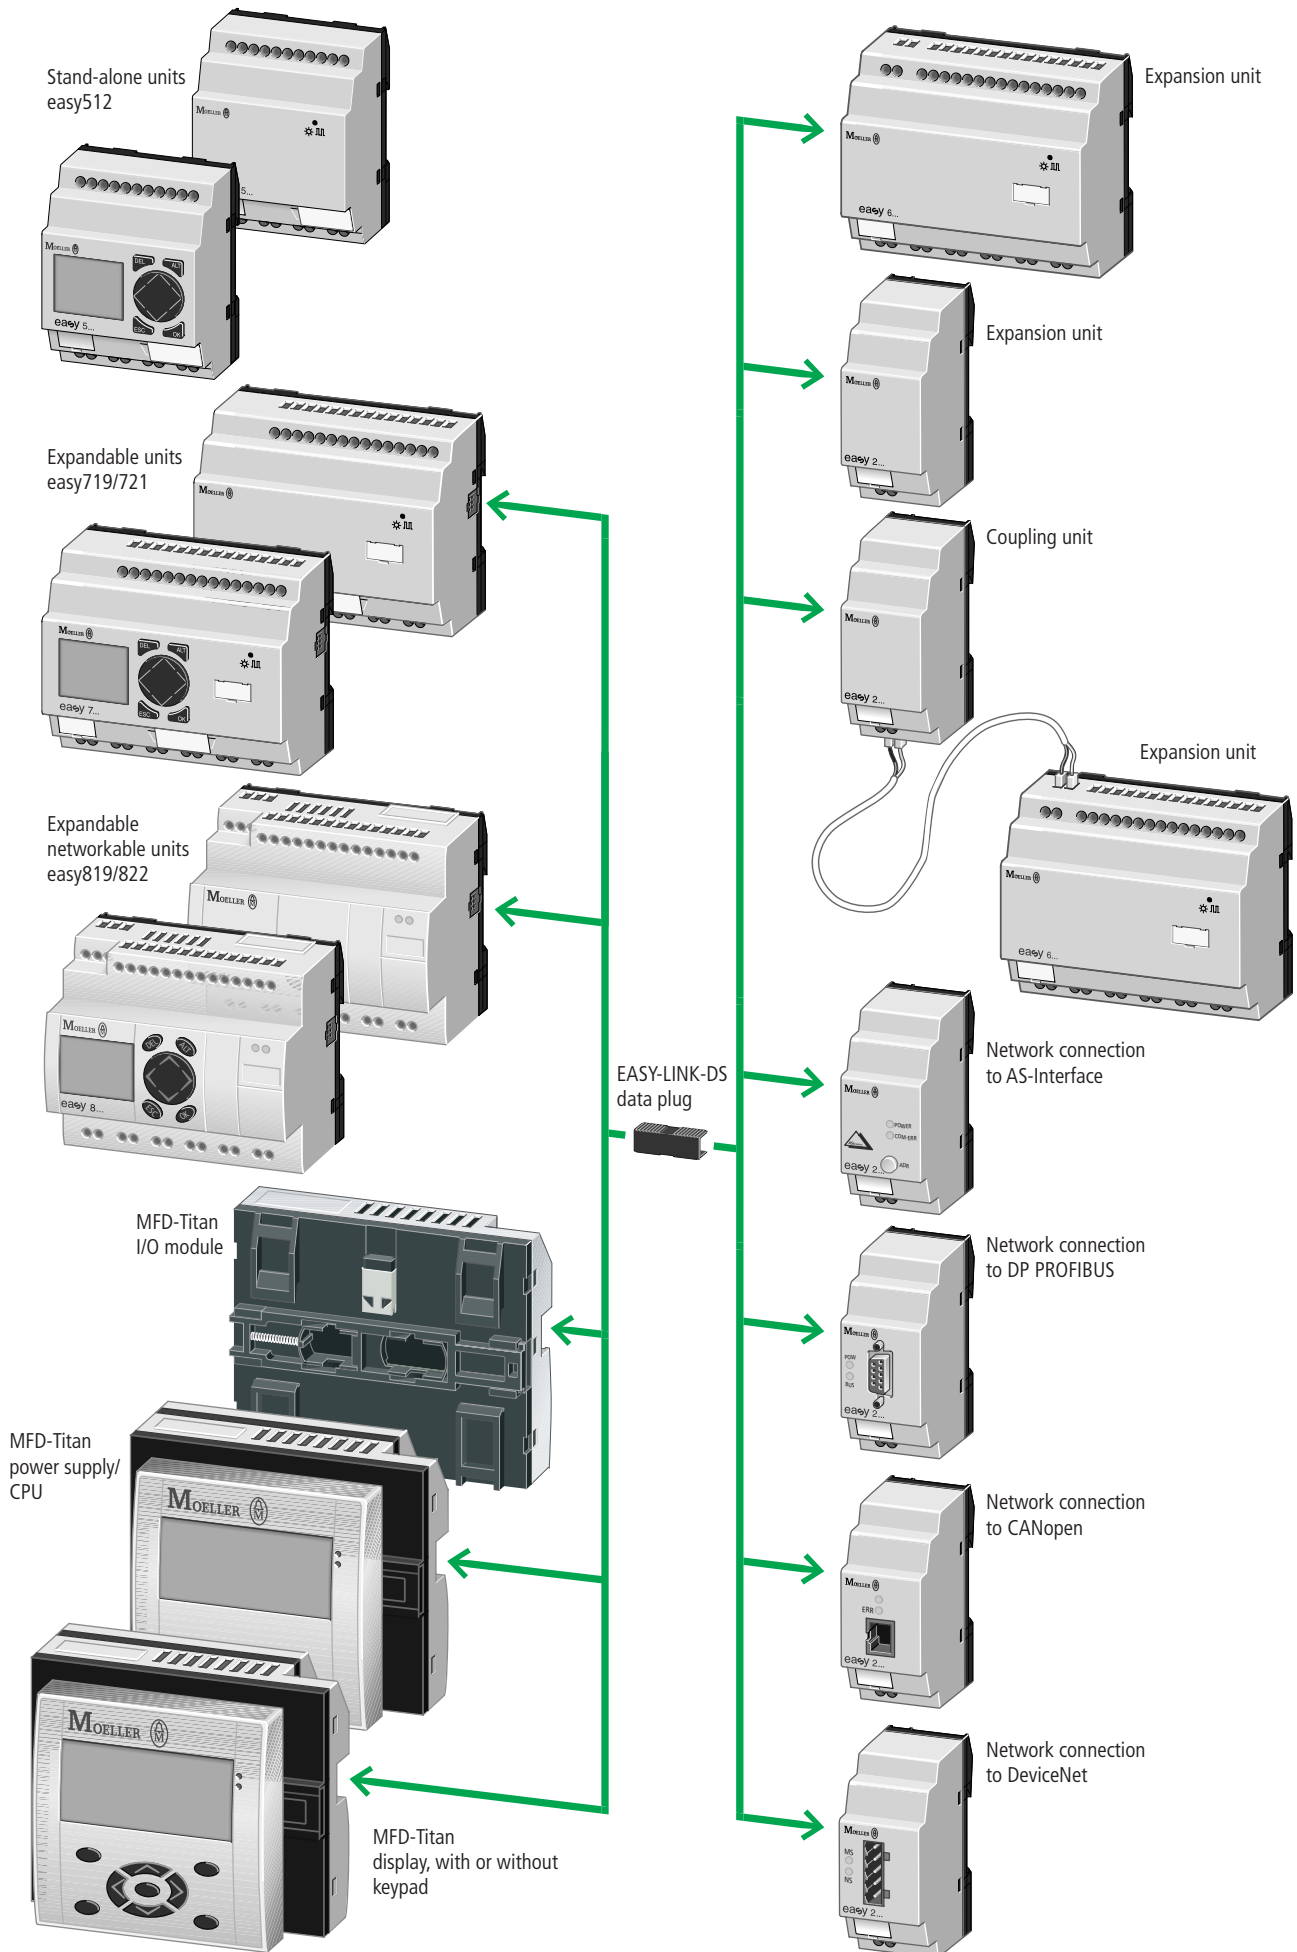

Moeller SK0211-1149GB



Moeller SK0211-1149GB

Description		Part number
Communication		
Coupling unit enabling remote expansion	up to 30 m	EASY200-EASY
PC connection cable	For easy500/700	EASY-PC-CAB
PC connection cable	For easy800 and MFD units	EASY800-PC-CAB
Cable for EASY-NET connection	Length 30 cm	EASY-NT-30
	Length 80 cm	EASY-NT-80
	Length 1.5 m	EASY-NT-150
Plug for EASY-NET bus termination	2 required per network installation	EASY-NT-R
Communication with other networks		
AS-interface slave connection	Addresses available 0 to 31	EASY205-ASI
PROFIBUS DP slave connection	Addresses available 1 to 126	EASY204-DP
CANopen interface	Addresses available 1 to 127	EASY221-CO
DeviceNet interface	Addresses available 0 to 63	EASY222-DN
ETHERNET gateway (multi-protocol)	Allows programming and data access	EASY209-SE
Power supplies		
	24 V DC, 1.25 A	EASY400-POW
	Dual output: 24 V DC, 250 mA and 12 V DC, 20 mA	EASY200-POW
Power supply unit/communication modules		
	24 V DC for use with easy500/700	MFD-CP4-500
	100 - 240 V AC for use with easy500/700	MFD-AC-CP4-500
	24 V DC for use with easy800/MFD-CP8..	MFD-CP4-800
	100 - 240 V AC for use with easy800/MFD-CP8..	MFD-AC-CP4-800
Memory modules		
	For easy500/700	EASY-M-32K
	For easy800 and MFD units	EASY-M-256K
Software		
	For easy500/700	EASY-SOFT-BASIC
	For easy500/700/800 and MFD displays	EASY-SOFT-PRO
Accessories		
Mounting rail	For MFD expansion	MFD-TS-144
Manuals		
easy500/700 instruction manual		AWB2528-1508-GB
easy800 instruction manual		AWB2528-1423-GB
MFD instruction manual		AWB2528-1480GB



Moeller SK0211-1149GB

