XT IEC Power Control

XTPAXUTS

Shroud for Unused Terminals of Three-Phase Commoning Links



For Use with	Description	Pkg. Qty. ①	Catalog Number
Frame B XTPR	To cover unused terminals on three-phase commoning link. Protected against direct contact.	20	XTPAXUTS

XTPAXIT

Incoming Terminals for Three-Phase Commoning Link ②



For Use with	Pkg. Qty. ①	Catalog Number
Frame B XTPR, XTPB	5	XTPAXIT

Line-Side Adapters ®

XTPAXLSA

For Use with... Catalog Number

Frame B XTPR to create a UL 508 Type E/F manual combination starter

XTPAXLSAD

For Use with... Catalog Number

Frame D XTPR to create a UL 508
Type E/F manual combination starter

AG IQ



Reduced size Frame D XTPR to create a UL 508 XTPAXIP2X Type E/F manual combination starter (not to be used with 3-phase commoning links)

Combination Connection Kits

Non-Reversing Starters

For Use with	Description/Comprised of	Std. Pack ①	Catalog Number
XTPRB + XTCEB	Mechanical connection element for XTPRB and contactor	1	XTPAXTPCB
	Main current wiring between XTPRB and contactor in toolless plug connection	1	
	Use contactor auxiliary switch XTCEXFAT Control cable guidance: max. six cables up to 2.5 mm ² external diameter or four cables up to 3.5 mm ² external diameter.		

XTPAXEMC_



XTPRB + XTCEB	Mechanical and electrical connection for XTPRB and contactor	5	XTPAXEMCB
XTPRB + XTCEC		5	XTPAXEMCC

XTPAXTPCD



XTPR...D + XTCE...D DIN rail adapter plate 1 XTPAXTPCD Main current wiring between XTPR and contactor

Notes

- ① Orders must be placed in multiples of package quantity listed.
- ② For three-phase commoning link, protected against accidental contact, U_e = 690V, I_u = 63A; For conductor cross-sections: 2.5–25 mm² stranded; 2.5–16 mm² flexible with ferrules, AWG 14-6.
- $^{\odot}$ XTPAXLSA is for three-phase commoning link, finger and back-of-hand proof, U_e = 690V, I_u = 60A for conductor cross sections: 2.5–25 mm² stranded, 2.5–16 mm² flexible with ferrule, AWG 14-6.
- TPAXLSAD cannot be combined with three-phase commoning links. Conductor size 8 AWG-1/0.

XT IEC Power Control

XTPAXUTS

Shroud for Unused Terminals of Three-Phase Commoning Links



For Use with	Description	Pkg. Qty. ①	Catalog Number
Frame B XTPR	To cover unused terminals on three-phase commoning link. Protected against direct contact.	20	XTPAXUTS

XTPAXIT

Incoming Terminals for Three-Phase Commoning Link ②



For Use with	Pkg. Qty. ①	Catalog Number
Frame B XTPR, XTPB	5	XTPAXIT

Line-Side Adapters ®

XTPAXLSA

For Use with... Catalog Number

Frame B XTPR to create a UL 508 Type E/F manual combination starter

XTPAXLSAD

For Use with... Catalog Number

Frame D XTPR to create a UL 508
Type E/F manual combination starter

AG IQ



Reduced size Frame D XTPR to create a UL 508 XTPAXIP2X Type E/F manual combination starter (not to be used with 3-phase commoning links)

Combination Connection Kits

Non-Reversing Starters

For Use with	Description/Comprised of	Std. Pack ①	Catalog Number
XTPRB + XTCEB	Mechanical connection element for XTPRB and contactor	1	XTPAXTPCB
	Main current wiring between XTPRB and contactor in toolless plug connection	1	
	Use contactor auxiliary switch XTCEXFAT Control cable guidance: max. six cables up to 2.5 mm ² external diameter or four cables up to 3.5 mm ² external diameter.		

XTPAXEMC_



XTPRB + XTCEB	Mechanical and electrical connection for XTPRB and contactor	5	XTPAXEMCB
XTPRB + XTCEC		5	XTPAXEMCC

XTPAXTPCD



XTPR...D + XTCE...D DIN rail adapter plate 1 XTPAXTPCD Main current wiring between XTPR and contactor

Notes

- ① Orders must be placed in multiples of package quantity listed.
- ② For three-phase commoning link, protected against accidental contact, U_e = 690V, I_u = 63A; For conductor cross-sections: 2.5–25 mm² stranded; 2.5–16 mm² flexible with ferrules, AWG 14-6.
- $^{\odot}$ XTPAXLSA is for three-phase commoning link, finger and back-of-hand proof, U_e = 690V, I_u = 60A for conductor cross sections: 2.5–25 mm² stranded, 2.5–16 mm² flexible with ferrule, AWG 14-6.
- TPAXLSAD cannot be combined with three-phase commoning links. Conductor size 8 AWG-1/0.