
369773i 1 04.08.24


# Maestro Dual Technology Sensor Switch

The Maestro dual technology (dual tech) occupancy sensor switch applies our exclusive XCT Technology to the ultrasonic as well as the passive infrared technology in this sensor to create a product that can detect very fine motion, such as typing. This product also includes all of the great features found in the rest of the Maestro sensor family, including: adaptive relay switching, smart ambient light detection, and simple button presses for changing settings. The Maestro dual tech occupancy sensor switch is available in single-circuit and dual-circuit versions.

The single-circuit versions (MS-A102, MS-B102) can be used to meet many of the Title 20/24, ASHRAE 90.1, and IECC code requirements such as “automatic shutoff”. The dual-circuit versions (MS-A202, MS-B202) can be used to meet many of the Title 20/24, ASHRAE 90.1, and IECC code requirements such as “automatic shutoff” and “multi-level lighting control”. To find some examples of code-specific applications, visit www.lutron.com/energycodes

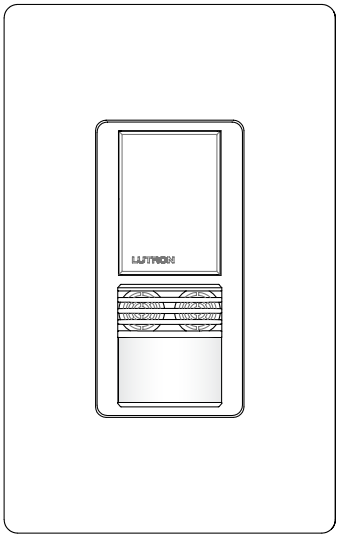

MS-A102-XX (Occupancy model)
MS-A102-V-XX (Vacancy model)
MS-B102-XX (Occupancy model)
MS-B102-V-XX (Vacancy model)

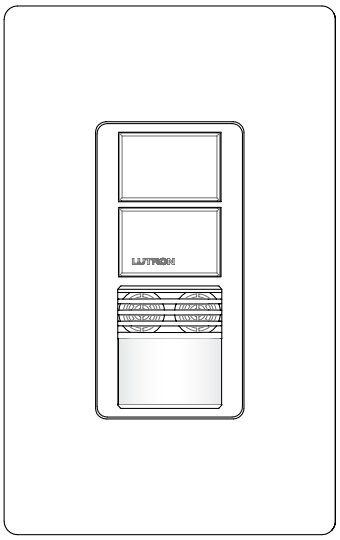

MS-A202-XX (Occupancy model)
MS-B202-XX (Occupancy model)

### Features

- XCT Technology for major, minor, fine, and very fine motion detection
- 180° sensor field-of-view
- Tamper-resistant PIR lens
- Up to 900 $ft^2$ (81 $m^2$) major motion coverage and 400 $ft^2$ (36 $m^2$) minor motion coverage
- Two Ambient Light Detect (ALD) options:
  - Learning ALD Mode:
    Uses adaptive algorithm.
    Sensor learns user’s preferred light level over time.
  - Fixed ALD mode:
    Four selectable light level thresholds: Hi, Med, Low, Min
- Occupancy models (MS-A102-XX, MS-B102-XX, MS-A202-XX, MS-B202-XX) can be set to Auto-ON/Auto-OFF or Manual-ON/Auto-OFF per circuit
- Dual-circuit model (MS-A202) meet Title 24 requirements for multi-level lighting control.
- Single-circuit “Vacancy” model (MS-A102-V-XX, MS-B102-V-XX) available to meet Title 24/Title 20 requirements for vacancy sensors.
- Adjustable timeout for each circuit (1, 5, 15, or 30 minutes)
- Sensitivity adjustment
  - PIR (Hi, Med, Low, Min)
  - Ultrasonic (Hi, Med, Low, Off)
- Switches all lighting loads: incandescent, halogen, ELV, MLV, CFL, LED, magnetic fluorescent, electronic fluorescent
- Switches fan loads at 120 V~
- MS-B102, MS-B102-V work with Maestro accessory switches in multi-location applications
- MS-A models DO NOT require neutral wiring, while the MS-B models DO require neutral wiring.

**Notes:**

- “XX” in the model number represents color/finish code. See **Colors and Finishes** at end of document.
- Wallplate not included.
- For TAA compliant models, add “W” before “MS” when ordering. Available in gloss colors only. For other BAA/TAA compliant products, please visit our website at www.lutron.com/BAA and select “download BAA product list”.

LUTRON SPECIFICATION SUBMITTAL Page 1

| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

369773i 2 04.08.24

## Specifications

### Regulatory Approvals

- UL Listed to U.S. and Canadian safety requirements
- NOM certified
- Title 20/24 certified lighting control device
  – Complies with Title 20 and Title 24 section 110.9

### Power/Load Control

- 120–277 V~ 50/60 Hz

### Key Design Features

- Dual Sensing Technology
- Switches all lighting loads
- 6 A of lighting load per circuit at 120–277 V~
- 4.4 A (1/6 HP) of fan load per circuit at 120 V~
- Crush/tamper resistant lens
- Smart Ambient Light Detection (ALD)
- Fixed Ambient Light Detection
- Adaptive zero-cross switching algorithm for extended relay life (patent pending)
- XCT Technology for major, minor, fine, and very fine motion detection
- Programmable circuit swapping eliminates need for rewiring to reassign circuits after installation of a dual-circuit product. (patent pending)
- Product ground current does not exceed 0.5 mA

### Environment

- Ambient operating temperature:
  32 °F to 104 °F (0 °C to 40 °C), 0%–90% humidity, non-condensing. Indoor use only.

### Warranty

- 5-Year Limited Warranty. For additional Warranty information, please visit www.lutron.com/TechnicalDocumentLibrary/Sensor_Warranty.pdf

### Sensor Detection

Lutron dual tech sensors operate by triggering initial occupancy using PIR technology, and maintain occupancy using both ultrasonic and PIR technology.

## Advanced Features

### Switching

- Adaptive zero-cross switching—maximizes relay life by switching at the point of minimum energy on the AC power curve (patent pending). Actively adapts to variations in relay timing.

### Additional Information on Sensors

- For single-circuit PIR Maestro occupancy sensor switch models, please see Lutron P/N 369666
- For Maestro occupancy sensor C•L dimmer models, please see Lutron P/N 369748
- For dual-circuit PIR Maestro occupancy sensor switch, please see Lutron P/N 369758
- For more information, please see www.lutron.com/occvacsensors
- Lutron Customer Support: 1.844.LUTRON1



| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

## Custom Settings

**Default settings shown in bold**

**- Timeout**

- 30 min
- **15 min**
- 5 min
- 1 min

Mode **- Sensor Modes**

Lights automatically turn off in all sensor modes

- **Occ -Occupancy mode (No ALD)** [1,2,3]
- Lrn - Occupancy with learning ALD mode
- Fixd - Occupancy with fixed ALD mode
- Vac - Vacancy mode (No ALD) [2,3]

1 MS-A102-XX, MS-B102-XX default is Occ
2 MS-A102-V-XX, MS-B102-V-XX is locked as Vac
3 MS-A202-XX, MS-B202-XX defaults are: Circuit 1 - Occ, Circuit 2 - Vac

**- Ultrasonic Sensitivity**

- High
- **Med**
- Low
- Off

PIR **- Passive Infrared Sensitivity**

- **High**
- Med
- Low
- Min

## Additional Settings

**Fixed ALD Light Level**

- Hi
- Med
- **Low***
- Min

* "Low" is the default setting for any sensor that is set by the user to: Occupancy with fixed ALD mode

**Off-While-Occupied**

- **Enabled**
- Disabled

**Walk-Thru Mode**

- Enabled
- **Disabled**

## Custom Settings - Details

**Ambient Light Detection (ALD) mode**

Lights turn on only when natural light in the room is below the set threshold.

– Learning: The ambient light threshold adjusts to the user's preference via manual interaction with the sensor switch.

– Fixed: Choose a fixed ALD light level from four pre-set options:
High, Medium, Low, and Minimum

**Manual Off-While-Occupied Options**

ENABLED (default setting)

– When the sensor switch is manually turned off, the sensor switch will not turn the lights back on automatically while the room is occupied.

– Once the room is vacated, the Auto-On feature returns to normal operation after the timeout period has expired.

– This may be the preference in conference rooms or classrooms while viewing presentations. This feature requires motions to keep the lights off.

DISABLED

– When the sensor switch is manually turned off, the Auto-On feature will return to normal operation after 25 seconds.

– This may be the preference in a restroom if the user always wants the lights to turn on upon entering and the lights to turn off when the room is vacant.

**Walk-Thru Mode**

ENABLED [1]

– If motion is not detected within 3 minutes after initial occupancy, the lights will turn off after 3 minutes, instead of the current timeout.

– This setting may be the preference in commercial applications where personnel may briefly trigger sensors during non-working hours.

DISABLED (default setting)

– When motion is detected, the lights will ALWAYS remain on for the entire timeout duration, regardless of the duration of occupancy detection.

1 1 minute timeout would be overridden if walk-thru mode is also ENABLED



| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

## Load Type and Capacity

| Control | Neutral Connection Required | Vacancy Only | Number of Circuits | TAA Compliant | Voltage/Load Type/Maximum Load (Anywhere in Gang) [1] | Minimum Load | 3-Way with Mechanical Switch | Multi-Location with Accessory Switch |
|---|---|---|---|---|---|---|---|---|
| MS-A102 | | | 1 | | 120 – 277 V~ Lighting 6 A [2]<br>120 V~ Fan 4.4 A (1/6 HP) [3] | 0 A | | |
| MS-A102-V | | ✓ | 1 | | | 0 A | | |
| MS-A202 | | | 2 | | | 0 A | | |
| MS-B102 | ✓ | | 1 | | | 0 A | ✓ | ✓ |
| MS-B102-V | ✓ | ✓ | 1 | | | 0 A | ✓ | ✓ |
| MS-B202 | ✓ | | 2 | | | 0 A | ✓ | |
| WMS-A102 | | | 1 | ✓ | | 0 A | | |
| WMS-A102-V | | ✓ | 1 | ✓ | | 0 A | | |
| WMS-A202 | | | 2 | ✓ | | 0 A | | |
| WMS-B102 | ✓ | | 1 | ✓ | | 0 A | ✓ | ✓ |
| WMS-B102-V | ✓ | ✓ | 1 | ✓ | | 0 A | ✓ | ✓ |
| WMS-B202 | ✓ | | 2 | ✓ | | 0 A | ✓ | |

[1] Ratings shown are per circuit.

[2] Sensor switch load type: Designed for use with permanently installed incandescent, halogen, MLV, ELV, CFL, LED, magnetic fluorescent, and electronic fluorescent lighting loads.

[3] When controlling light and fan loads simultaneously on a single-circuit, maximum load capacity per circuit is 4.4 A at 120 V~.

- Ground or neutral is required for product to function. If neither wire is present, consult a licensed electrician.
- For models MS-A102 and MS-A202, connect green-sleeved wire to ground only in retrofit and replacement applications. When neutral connection is available, remove green sleeve and connect the white wire to neutral.

## Sensor switch placement

- The sensor switch performs better with an unobstructed view of room occupants.
- Hot objects and moving air currents can affect the performance of the sensor switch. The sensor switch performs best when located 6 ft (1.8 m) or more away from hot objects or moving air currents.
- The PIR performance depends on a temperature differential between the ambient room temperature and that of room occupants. Warmer rooms may reduce the ability of the sensor switch to detect occupants.
- The ultrasonic performance can be affected by air currents and moving objects. Consider the effects of fans, HVAC vents, open windows, or moving objects when installing the sensor switch.
- If the sensor sees a specific area that is not desired (e.g., hallway), Lutron offers a lens mask kit (Lutron P/N 50013614) that can be ordered through Customer Support (1.844.LUTRON1). Alternatively, selectively placing opaque tape (e.g., painter's tape, electrical tape, masking tape) over certain parts of the lens can limit it's field of vision to block undesired detection areas. Masking the lens may effect ALD performance, but DOES NOT block ultrasonic frequencies.

### Definitions

***Major motion:*** movement of a person entering or passing through an area.

***Minor motion:*** movement of a person occupying an area and engaging in small activities (e.g., reaching for a telephone, turning the pages of a book, opening a file folder, picking up a coffee cup).

***Fine Motion:*** movement of a person occupying an area and engaging in very small activities (e.g., reading a magazine).

***Very Fine Motion:*** movement of a person occupying an area and engaging in very small activities (e.g., typing on a keyboard).




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

# Sensor switch placement *(continued)*

## NEMA WD7 Coverage


Major motion coverage: 900 ft$^2$ (81 m$^2$)

Minor motion coverage: 400 ft$^2$ (36 m$^2$)

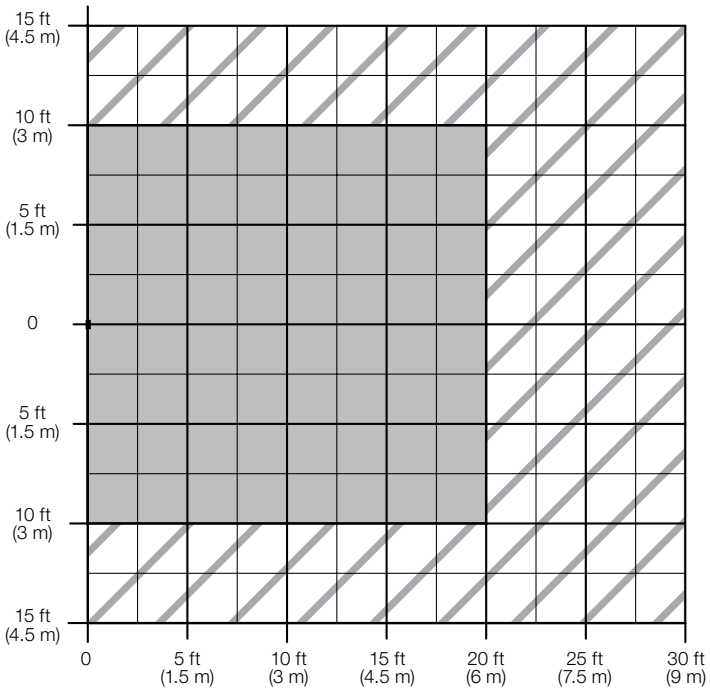



**Test Room Dimensions:** 37 ft x 38 ft (11.28 m x 11.6 m)
**Test Floor Surface Material:** Carpet
**Sensor Coverage Angle:** 180 °
**Major motion coverage:** Initial trigger motion detection
**Minor motion coverage:** Maintained motion detection

## Passive Infrared Beam Diagram
**(For Reference Only)**

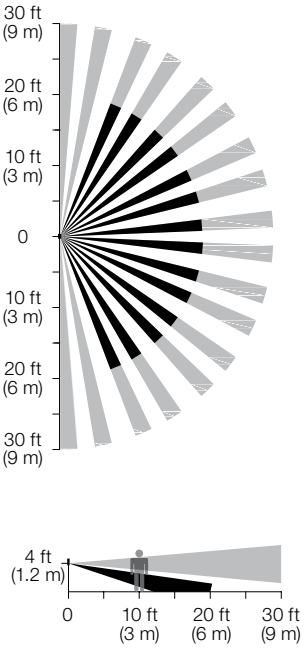


## Ultrasonic Coverage
**(For Reference Only)**

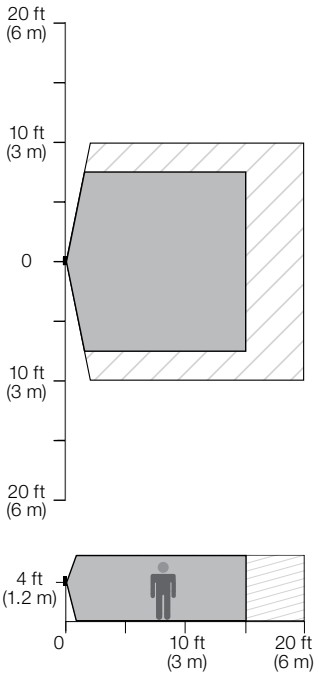


Ultrasonic Frequency: 40 kHz




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |


## Dimensions - single-circuit
## MS-A102, MS-A102-V, MS-B102, MS-B102-V

Measurements shown as: in (mm).

**Front View** **Side View**

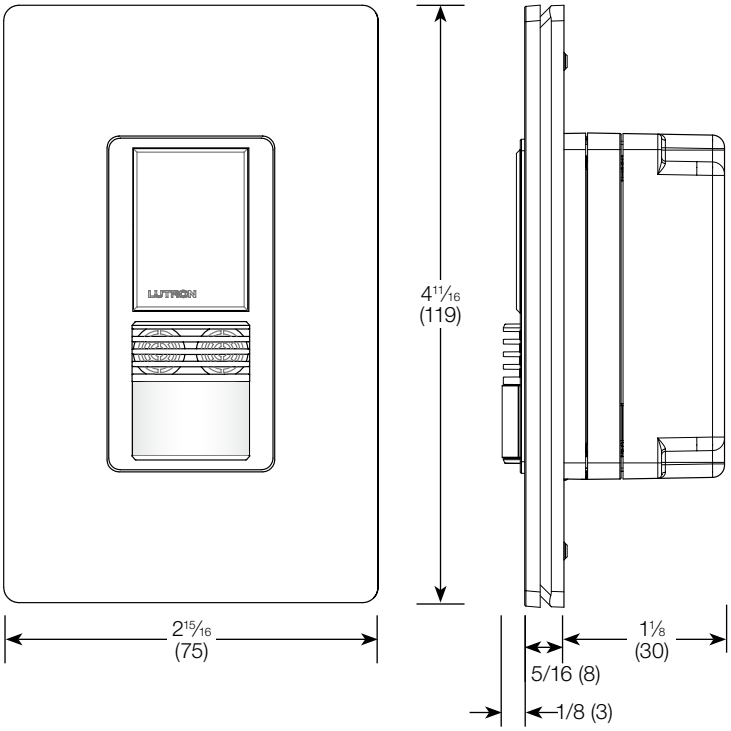



## Operation

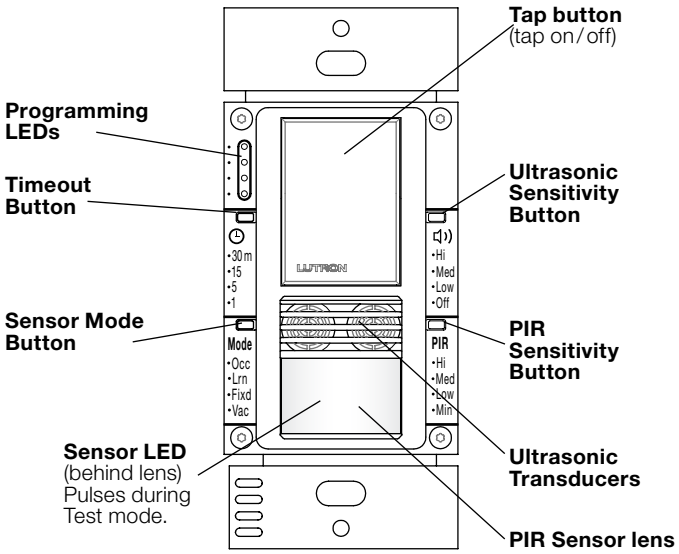




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

## Mounting

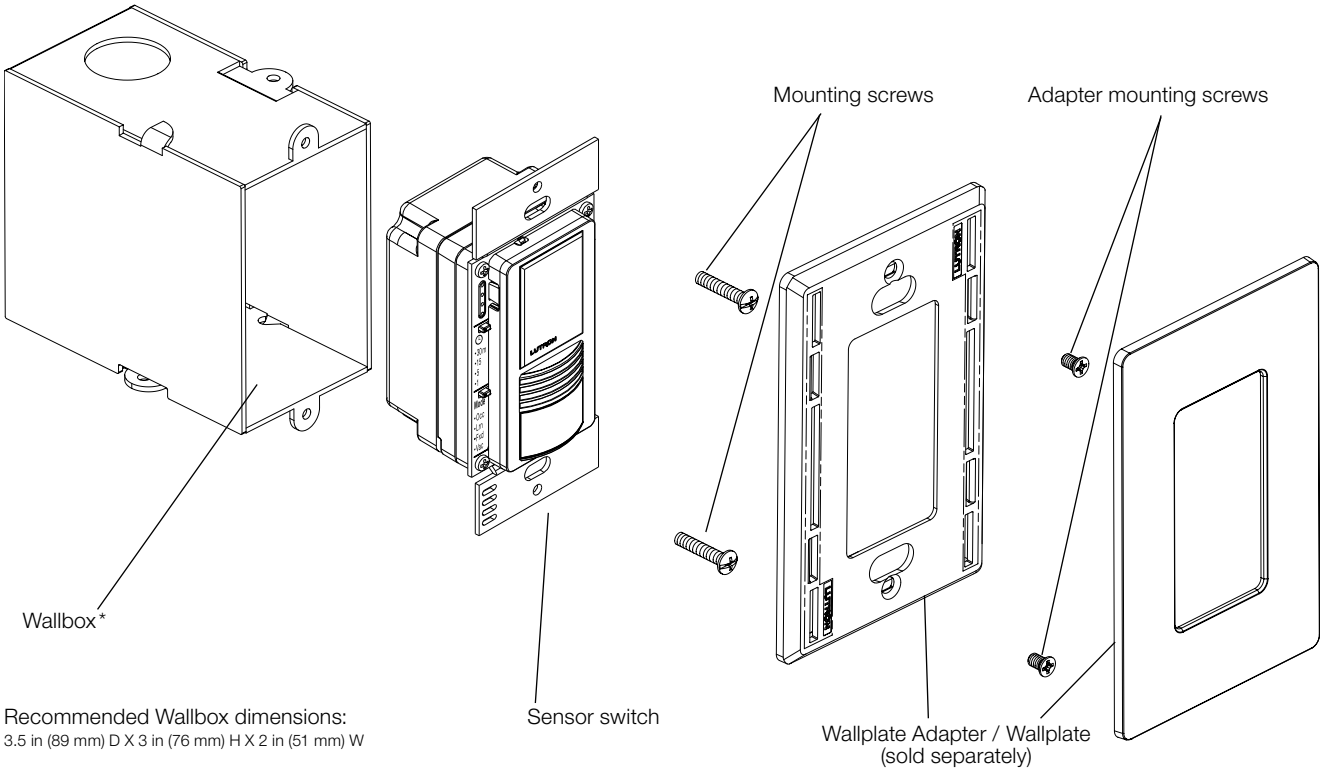


* Recommended Wallbox dimensions:
3.5 in (89 mm) D X 3 in (76 mm) H X 2 in (51 mm) W




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

369773i 8 04.08.24


## Wiring Installations with the Maestro Dual Technology Sensor Switch A102

In order to function, the dual technology sensor switch must have a ground or neutral wire connected. Connect green-sleeved wire to ground only in retrofit and replacement applications. When a neutral connection is available, remove green sleeve and connect white wire to neutral. Before installing wallplate, program all desired settings.

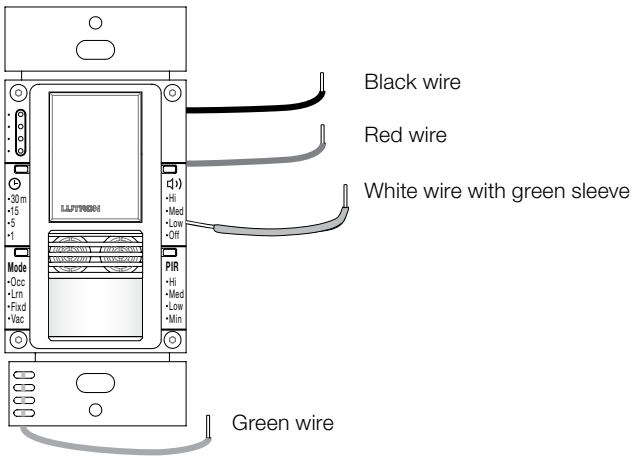


## Wiring Installations with the Maestro Dual Technology Sensor Switch B102

Before installing wallplate, program all desired settings.

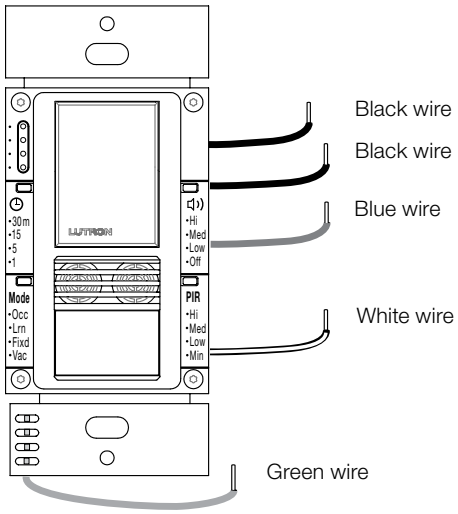





| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |


## Dimensions - dual-circuit MS-A202, MS-B202

Measurements shown as: in (mm).

**Front View** **Side View**

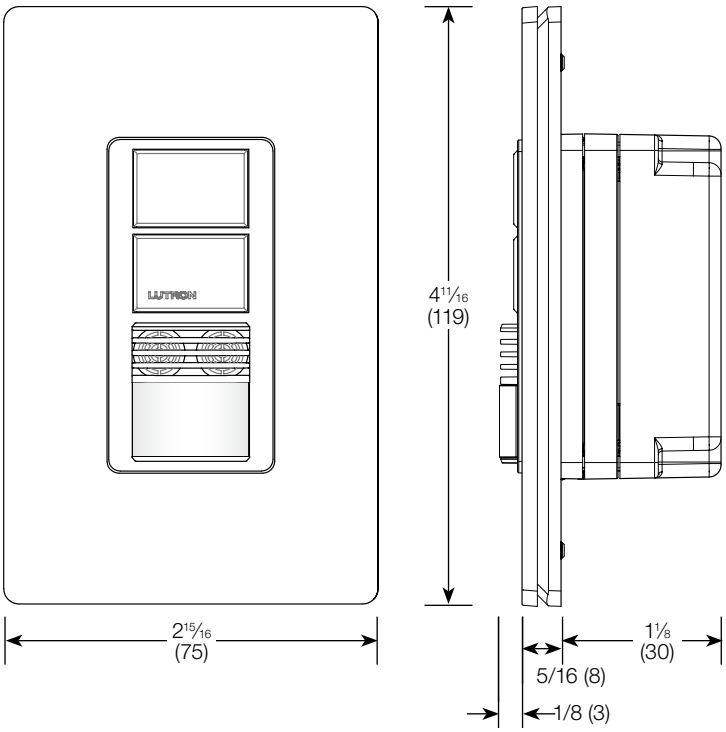



## Operation

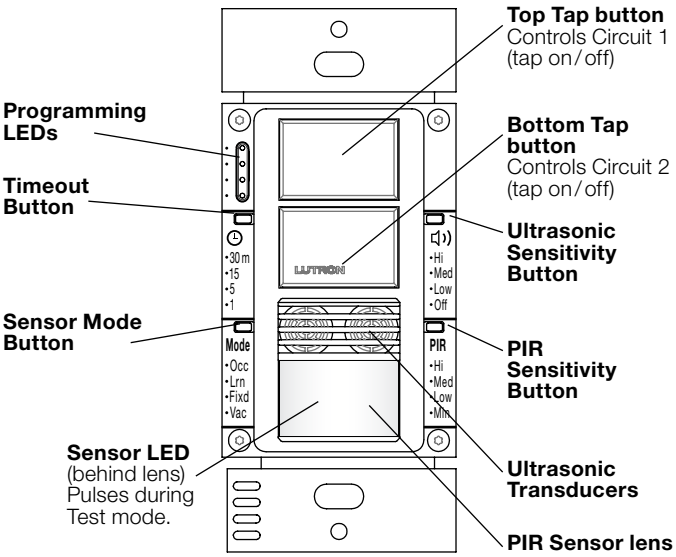




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

## Mounting

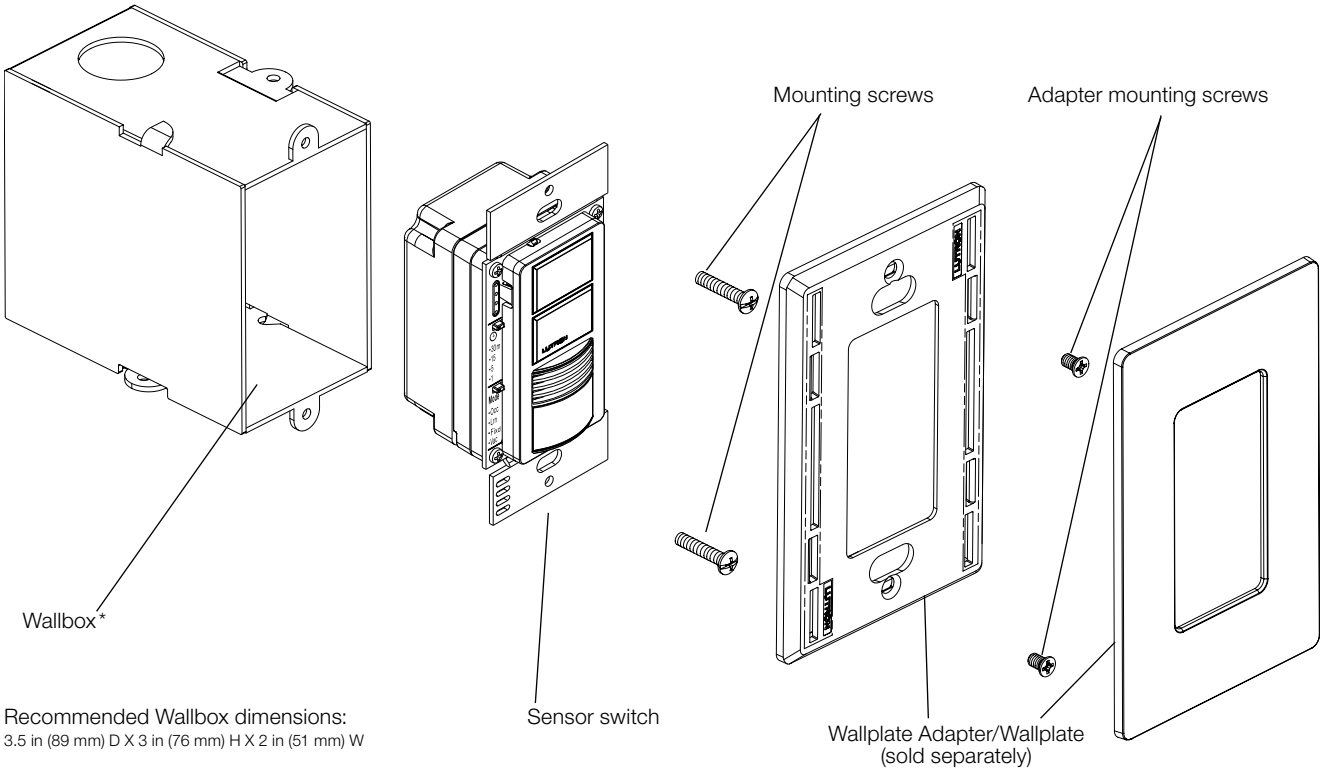



* Recommended Wallbox dimensions:
3.5 in (89 mm) D X 3 in (76 mm) H X 2 in (51 mm) W



| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |


## Wiring Installations with the Maestro Dual Technology Sensor Switch A202

In order to function, the dual technology sensor switch must have a ground or neutral wire connected. Connect green-sleeved wire to ground only in retrofit and replacement applications. When a neutral connection is available, remove green sleeve and connect white wire to neutral. Before installing wallplate, program all desired settings.

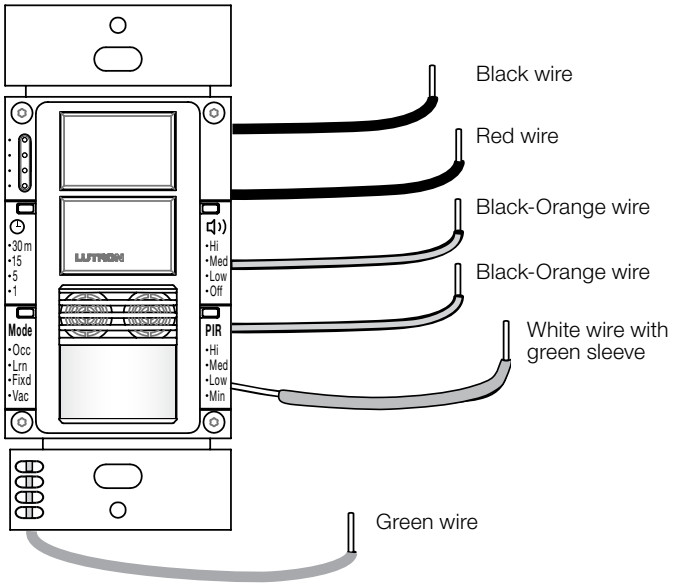


## Wiring Installations with the Maestro Dual Technology Sensor Switch B202


Before installing wallplate, program all desired settings.

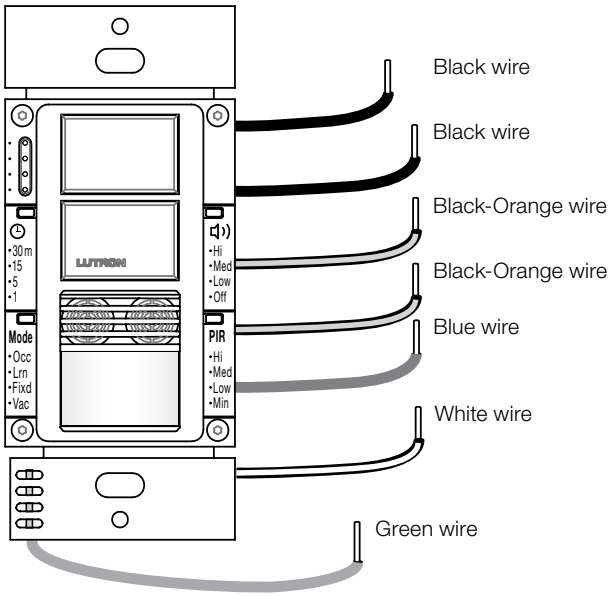

# Wiring Diagrams - Single-Circuit

## Wiring Diagram 1


**Single pole wiring - single-circuit (MS-A102, MS-A102-V) with neutral**

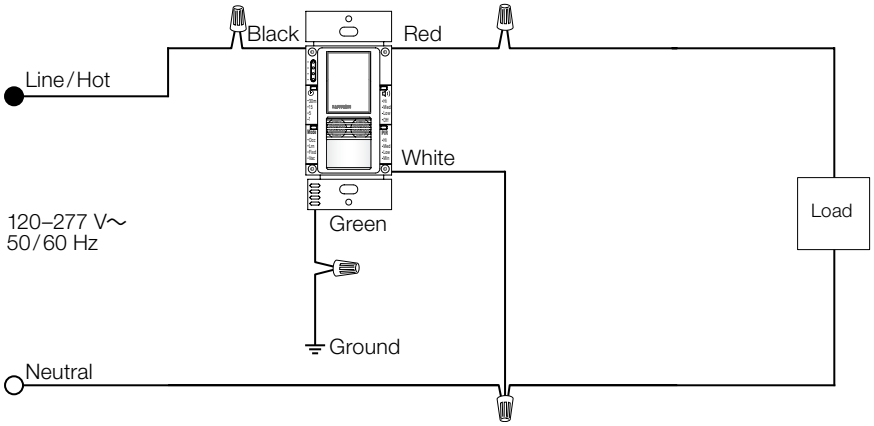


Note: When a neutral connection is available, remove green sleeve and connect the white wire to neutral

## Wiring Diagram 2


**Single pole wiring - single-circuit (MS-A102, MS-A102-V) without neutral**

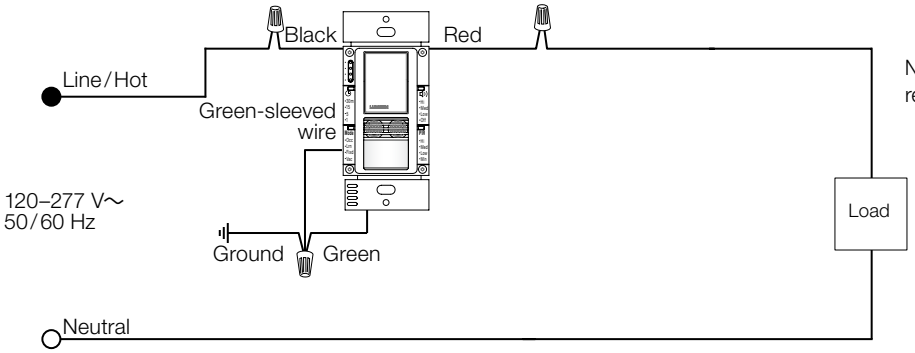


Note: Connect green-sleeved wire to ground only in retrofit and replacement applications.

## Wiring Diagram 3

**Single pole wiring - single-circuit (MS-B102, MS-B102-V)**

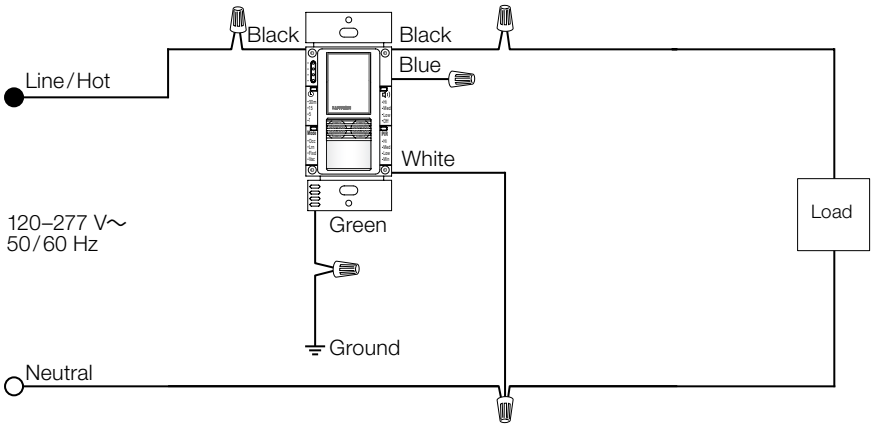


*continued on next page...*




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

# Wiring Diagrams - Single-Circuit *(continued)*



## Wiring Diagram 4


**120 V~ Multi-location installation with Maestro accessory switches (MS-B102, MS-B102-V)**

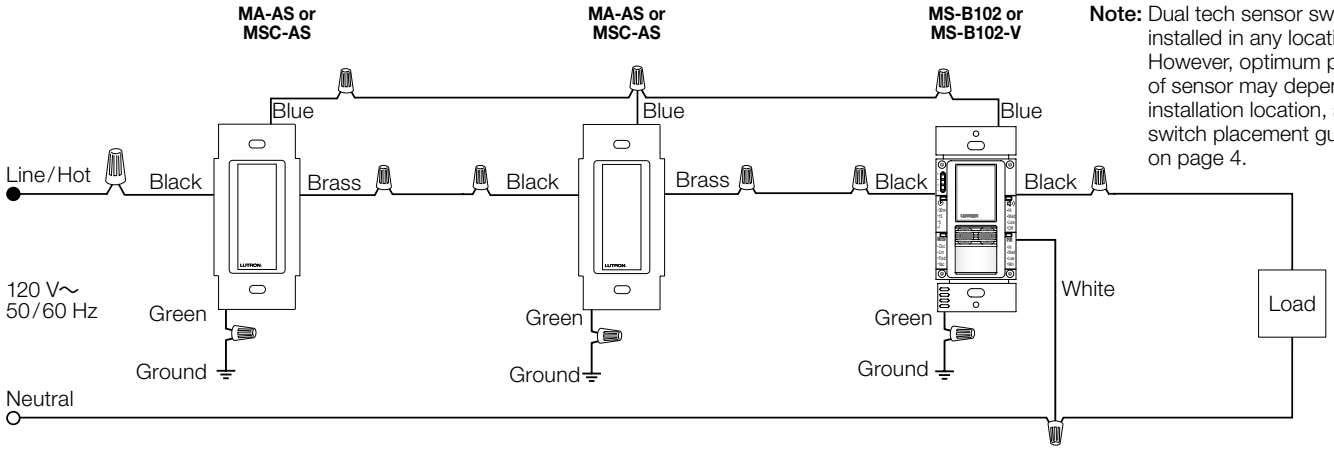


**Note:** Dual tech sensor switch can be installed in any location. However, optimum performance of sensor may depend upon installation location, see sensor switch placement guidelines on page 4.

## Wiring Diagram 5


**220/240 V~ Multi-location installation with Maestro accessory switches (MS-B102, MS-B102-V)**

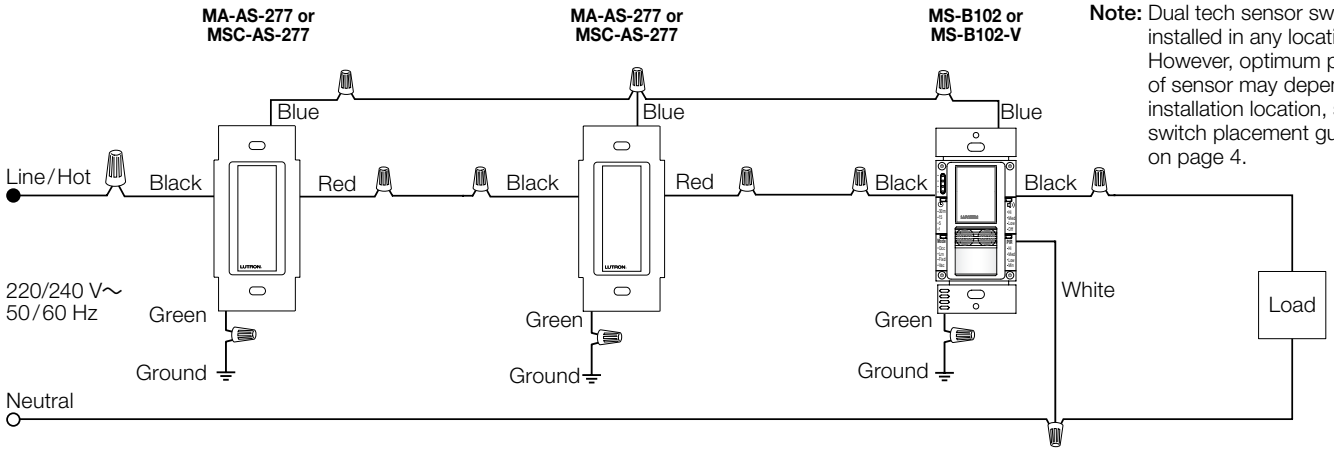


**Note:** Dual tech sensor switch can be installed in any location. However, optimum performance of sensor may depend upon installation location, see sensor switch placement guidelines on page 4.

## Wiring Diagram 6

**277 V~ Multi-location installation with Maestro accessory switches (MS-B102, MS-B102-V)**

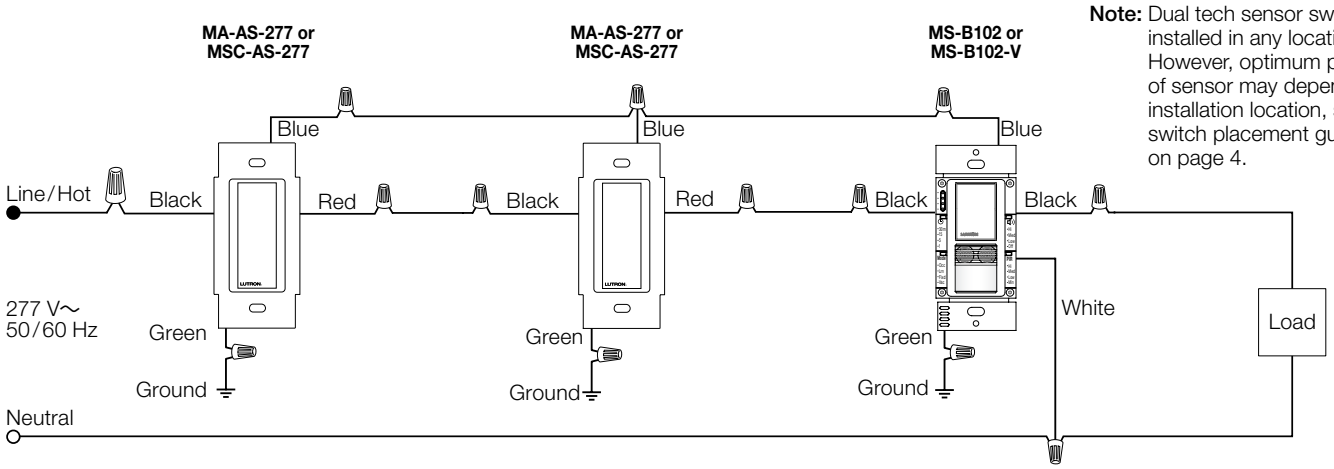


**Note:** Dual tech sensor switch can be installed in any location. However, optimum performance of sensor may depend upon installation location, see sensor switch placement guidelines on page 4.




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

# Wiring Diagrams - Single-Circuit *(continued)*

## Wiring Diagram 7

### 3-way installation - single-circuit (MS-B102, MS-B102-V)

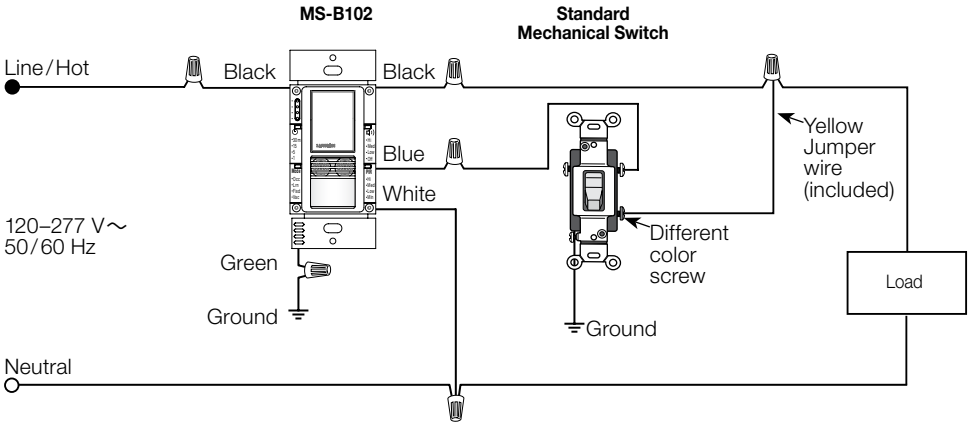


**Note:** Dual tech sensor switch can be installed in any location. However, optimum performance of sensor may depend upon installation location, see sensor switch placement guidelines on page 4.

### 3-way installation

For retrofit 3-way installations the mechanical switch needs to be rewired as shown in the diagram below after wiring the dual tech sensor switch. Otherwise the 3-way installation will not work as expected. Single pole mechanical switches may also be used in a 3-way installation with MS-B102, MS-B102-V and MS-B202 models.


1. Connect Ground: Ensure the bare copper or green ground wire from the wallbox is connected to the green ground screw of the mechanical switch.

2. Tag circuit Common: Your 3-way mechanical switch should have three screw terminals, two of the same color, and one of a different color. Tag the wire that is connected to the screw terminal of a different color.

3. Identify the wire that matches the color of the wire you connected to the blue wire of the Maestro dual technology occupancy sensor switch. Connect this wire to one of the two terminals of the same color.


4. Combine the tagged wire, the remaining wire and yellow jumper wire (included) using a wire connector. Connect the other end of jumper wire to the different color screw.

**Traditional 3-way mechanical switch wiring**

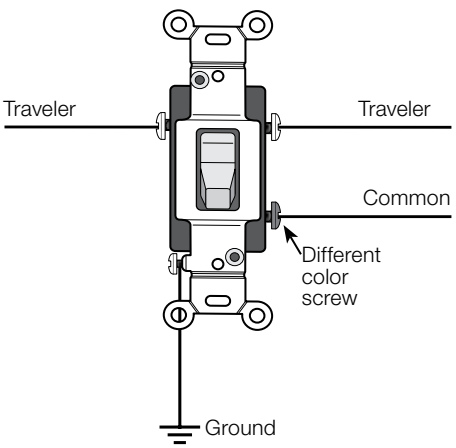


Rewire to

**3-way mechanical switch wiring with dual tech sensor switch**

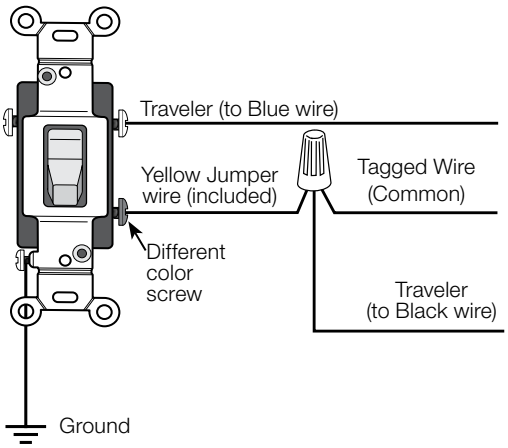





| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

# Wiring Diagrams - Dual-Circuit

## Wiring Diagram 1


**Single pole, single breaker feed wiring - dual-circuit (MS-A202) with neutral**

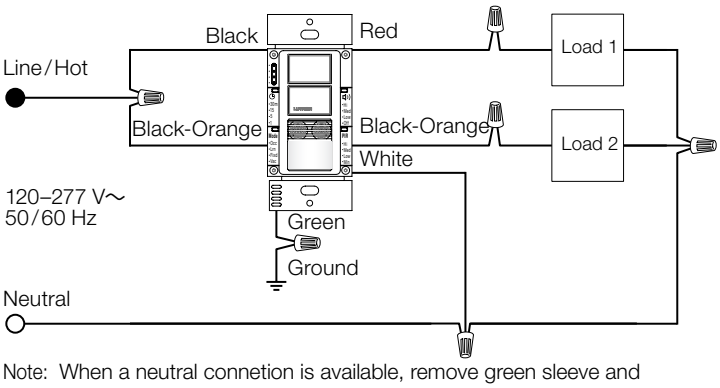


Note: When a neutral connetion is available, remove green sleeve and connect the white wire to neutral.

## Wiring Diagram 2


**Single pole, single breaker feed wiring - dual-circuit (MS-A202) without neutral**

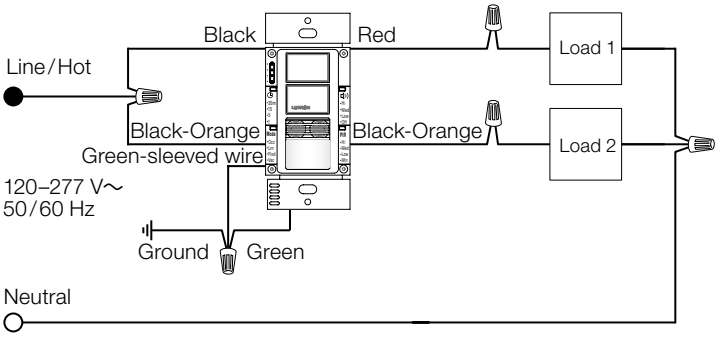


Note: Connect green-sleeved wire to ground only in retrofit and replacement applications.


## Wiring Diagram 3

**Single pole, single breaker feed wiring - dual-circuit (MS-B202)**

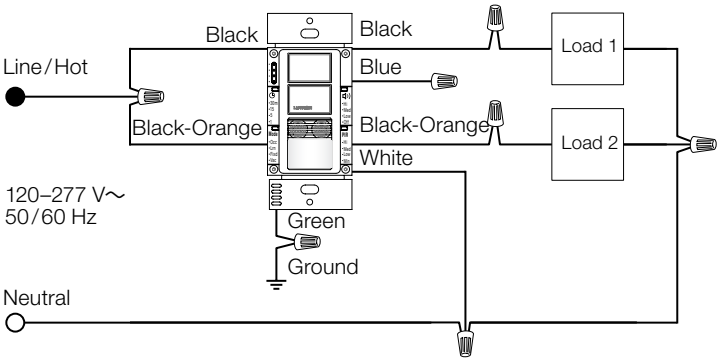


## Wiring Diagram 4

**Single pole, two breaker feed wiring - dual-circuit (MS-A202) with neutral**

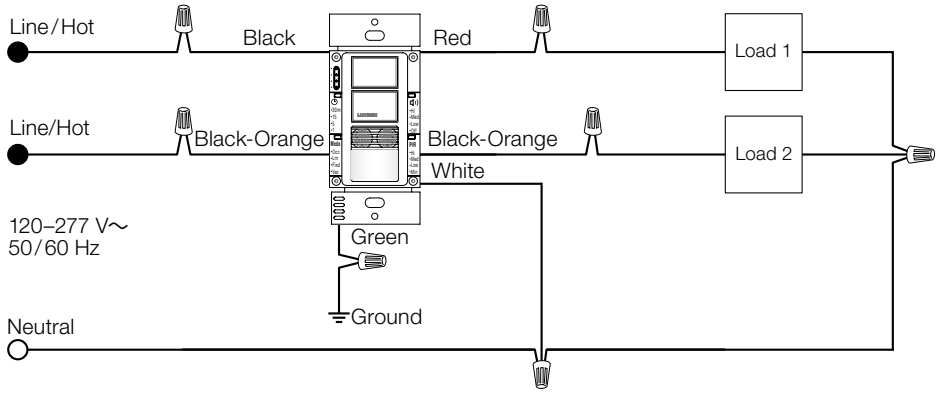


Note: When a neutral connection is available, remove green sleeve and connect the white wire to neutral.

Wiring must comply with NEC® code for wiring multiple branch circuits. Where two or more branch circuits supply devices or equipment on the same yoke, a means to simultaneously disconnect the ungrounded conductors supplying those devices shall be provided at the point at which the branch circuits originate.

*continued on next page...*




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

# Wiring Diagrams - Dual-Circuit *(continued)*

## Wiring Diagram 5


**Single pole, two breaker feed wiring - dual-circuit (MS-A202) without neutral**

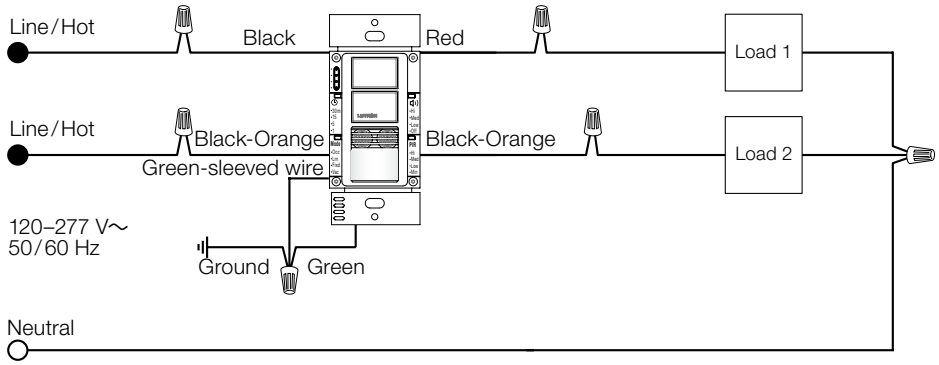


Note: Connect green-sleeved wire to ground only in retrofit and replacement applications.

## Wiring Diagram 6

**Single pole, two breaker feed wiring - dual-circuit (MS-B202)**

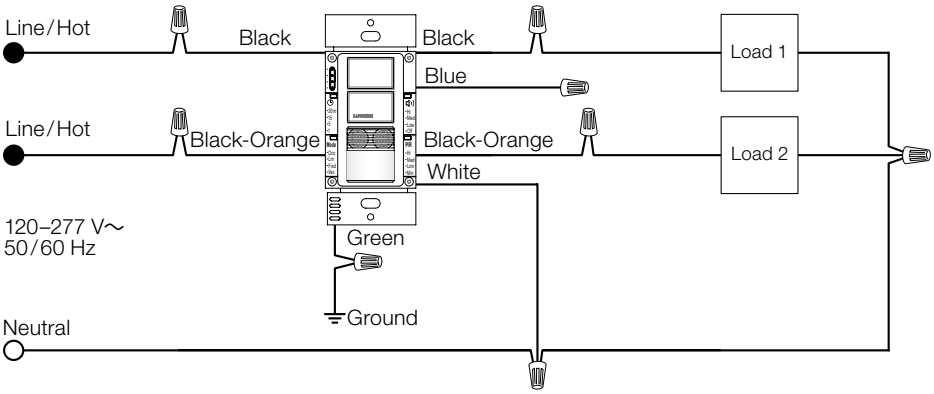



Wiring must comply with NEC® code for wiring multiple branch circuits. Where two or more branch circuits supply devices or equipment on the same yoke, a means to simultaneously disconnect the ungrounded conductors supplying those devices shall be provided at the point at which the branch circuits originate.

# Wiring Diagrams - Dual-Circuit *(continued)*

## Wiring Diagram 7

### 3-way installation, single breaker feed wiring: dual-circuit (MS-B202)

**NOTE:** Do not use Maestro accessory switches with MS-B202.

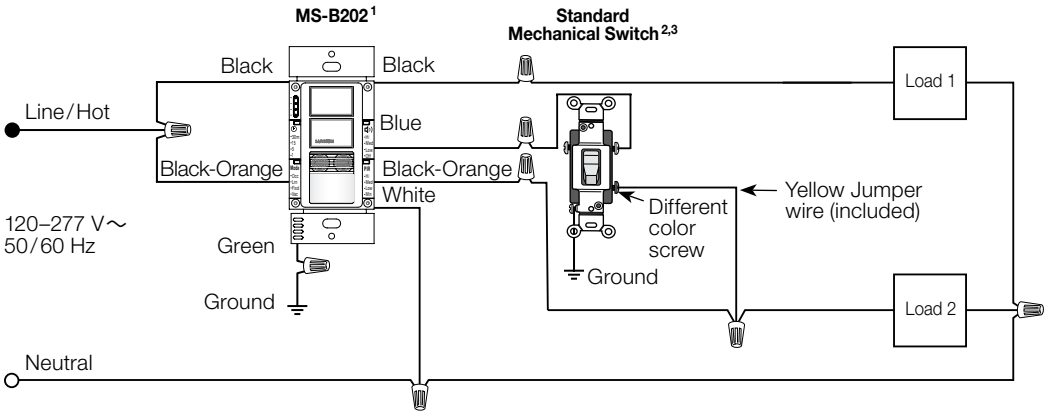



**Note:** Optimum performance of sensor may depend upon installation location, see sensor switch placement guidelines on page 4.

## Wiring Diagram 8

### 3-way installation, two breaker feed wiring: dual-circuit (MS-B202)

Wiring must comply with NEC® code for wiring multiple branch circuits. Where two or more branch circuits supply devices or equipment on the same yoke, a means to simultaneously disconnect the ungrounded conductors supplying those devices shall be provided at the point at which the branch circuits originate.

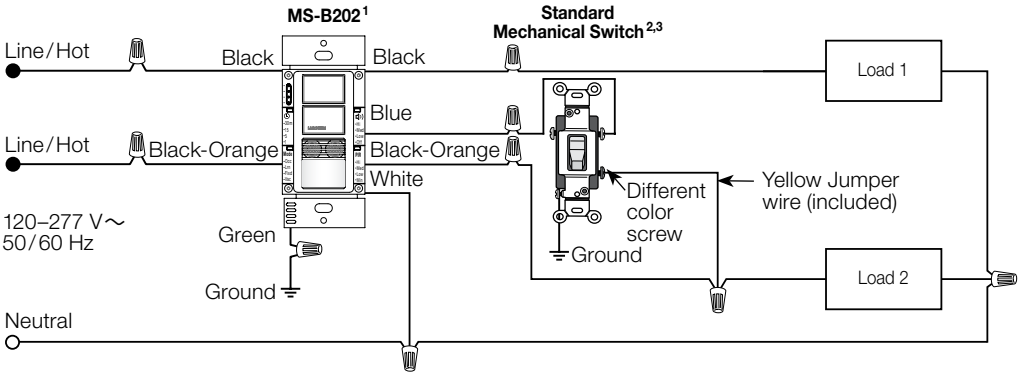


**Note:** Do not use Maestro accessory switches with MS-B202.

**Note:** Optimum performance of sensor may depend upon installation location, see sensor switch placement guidelines on page 4.

1 Dual tech sensor switch can be installed in any location.

2 Mechanical switch may be wired to **either** circuit, and will control both. **Do NOT** wire mechanical switch to **both** circuits.

3 You may use no more than one mechanical switch with a dual-circuit dual tech sensor switch.



| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |


369773i 18 04.08.24

## 3-way installation

For retrofit 3-way installations the mechanical switch needs to be rewired as shown in the diagram below after wiring the dual tech sensor switch. Otherwise the 3-way installation will not work as expected. Single-pole mechanical switches may also be used in a 3-way with MS-B102, MS-B102-V and MS-B202 models.


1. Connect Ground: Ensure the bare copper or green ground wire from the wallbox is connected to the green ground screw of the mechanical switch.
2. Tag circuit Common: Your 3-way mechanical switch should have three screw terminals, two of the same color, and one of a different color. Tag the wire that is connected to the screw terminal of a different color.
3. Identify the wire that matches the color of the wire you connected to the blue wire of the Maestro dual technology occupancy sensor switch. Connect this wire to one of the two terminals of the same color.
4. Combine the tagged wire, the remaining wire and yellow jumper wire (included) using a wire connector. Connect the other end of jumper wire to the different color screw.

**Traditional 3-way mechanical switch wiring**

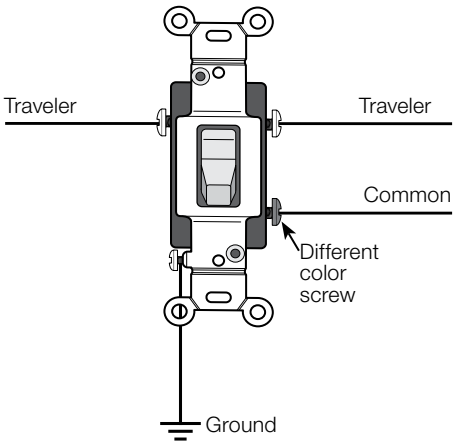


Rewire to

**3-way mechanical switch wiring with dual tech sensor switch**

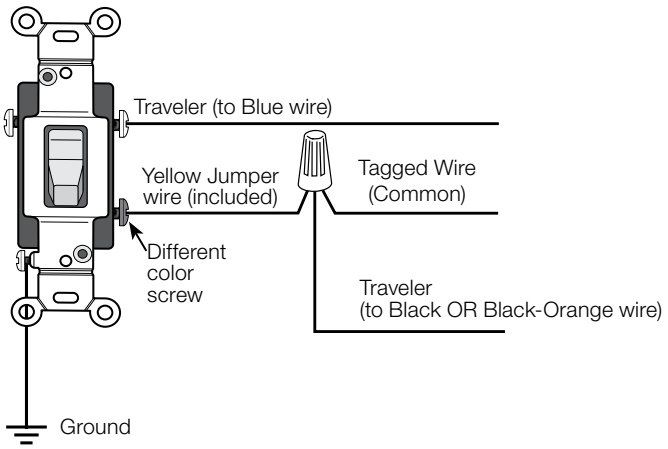


## How loads operate in 3-way with dual-circuit sensor switch (MS-B202)


| | Initial Load State | | After flipping 3-way mechanical switch | |
|---|---|---|---|---|
| | **Circuit 1** | **Circuit 2** | **Circuit 1** | **Circuit 2** |
| **When All Lights are OFF** | Off | Off | On | On |
| **When All Lights are ON** | On | On | Off | Off |
| **When One Circuit is ON** | On | Off | Off | Off |
| | Off | On | Off | Off |




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

# Colors and Finishes


## Gloss Finishes




White
WH

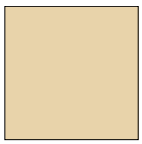


Ivory
IV

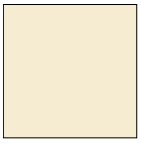

Almond
AL

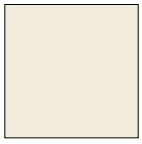

Light Almond
LA



Gray
GR




Brown
BR



Black
BL


## Satin Finishes




Snow
SW




Midnight
MN



Taupe
TP



Biscuit
BI

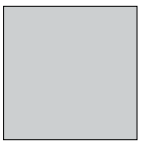

Palladium
PD



Hot
HT

For the latest color offerings please see our website:
http://www.lutron.com/satincolors

- Due to printing limitations, colors and finishes shown cannot be guaranteed to match actual product colors perfectly.
- Color chip keychains are available for more precise color matching:
  Gloss Finishes: DG-CK-1
  Satin Finishes: SF-CK-1

The Lutron logo, Lutron, Maestro, XCT, and C•L are trademarks or registered trademarks of Lutron Electronics Co., Inc. in the US and/or other countries.
All other product names, logos, and brands are property of their respective owners.




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

369773i 1 04.08.24


# Maestro Dual Technology Sensor Switch

The Maestro dual technology (dual tech) occupancy sensor switch applies our exclusive XCT Technology to the ultrasonic as well as the passive infrared technology in this sensor to create a product that can detect very fine motion, such as typing. This product also includes all of the great features found in the rest of the Maestro sensor family, including: adaptive relay switching, smart ambient light detection, and simple button presses for changing settings. The Maestro dual tech occupancy sensor switch is available in single-circuit and dual-circuit versions.

The single-circuit versions (MS-A102, MS-B102) can be used to meet many of the Title 20/24, ASHRAE 90.1, and IECC code requirements such as “automatic shutoff”. The dual-circuit versions (MS-A202, MS-B202) can be used to meet many of the Title 20/24, ASHRAE 90.1, and IECC code requirements such as “automatic shutoff” and “multi-level lighting control”. To find some examples of code-specific applications, visit www.lutron.com/energycodes

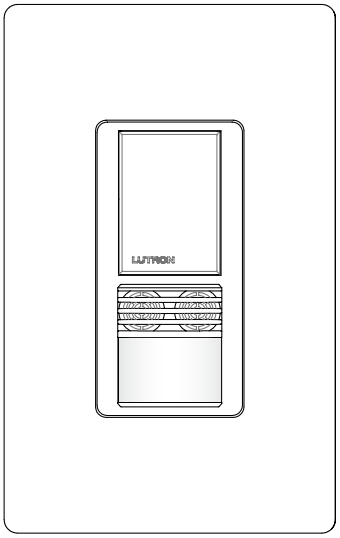

MS-A102-XX (Occupancy model)
MS-A102-V-XX (Vacancy model)
MS-B102-XX (Occupancy model)
MS-B102-V-XX (Vacancy model)

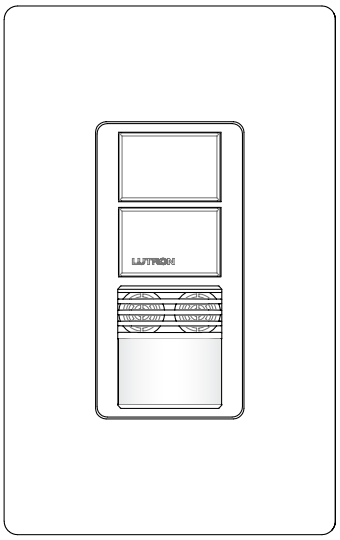

MS-A202-XX (Occupancy model)
MS-B202-XX (Occupancy model)

### Features

- XCT Technology for major, minor, fine, and very fine motion detection
- 180° sensor field-of-view
- Tamper-resistant PIR lens
- Up to 900 $ft^2$ (81 $m^2$) major motion coverage and 400 $ft^2$ (36 $m^2$) minor motion coverage
- Two Ambient Light Detect (ALD) options:
  - Learning ALD Mode:
    Uses adaptive algorithm.
    Sensor learns user’s preferred light level over time.
  - Fixed ALD mode:
    Four selectable light level thresholds: Hi, Med, Low, Min
- Occupancy models (MS-A102-XX, MS-B102-XX, MS-A202-XX, MS-B202-XX) can be set to Auto-ON/Auto-OFF or Manual-ON/Auto-OFF per circuit
- Dual-circuit model (MS-A202) meet Title 24 requirements for multi-level lighting control.
- Single-circuit “Vacancy” model (MS-A102-V-XX, MS-B102-V-XX) available to meet Title 24/Title 20 requirements for vacancy sensors.
- Adjustable timeout for each circuit (1, 5, 15, or 30 minutes)
- Sensitivity adjustment
  - PIR (Hi, Med, Low, Min)
  - Ultrasonic (Hi, Med, Low, Off)
- Switches all lighting loads: incandescent, halogen, ELV, MLV, CFL, LED, magnetic fluorescent, electronic fluorescent
- Switches fan loads at 120 V~
- MS-B102, MS-B102-V work with Maestro accessory switches in multi-location applications
- MS-A models DO NOT require neutral wiring, while the MS-B models DO require neutral wiring.

**Notes:**

- “XX” in the model number represents color/finish code. See **Colors and Finishes** at end of document.
- Wallplate not included.
- For TAA compliant models, add “W” before “MS” when ordering. Available in gloss colors only. For other BAA/TAA compliant products, please visit our website at www.lutron.com/BAA and select “download BAA product list”.

LUTRON SPECIFICATION SUBMITTAL Page 1

| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

369773i 2 04.08.24

## Specifications

### Regulatory Approvals

- UL Listed to U.S. and Canadian safety requirements
- NOM certified
- Title 20/24 certified lighting control device
  – Complies with Title 20 and Title 24 section 110.9

### Power/Load Control

- 120–277 V~ 50/60 Hz

### Key Design Features

- Dual Sensing Technology
- Switches all lighting loads
- 6 A of lighting load per circuit at 120–277 V~
- 4.4 A (1/6 HP) of fan load per circuit at 120 V~
- Crush/tamper resistant lens
- Smart Ambient Light Detection (ALD)
- Fixed Ambient Light Detection
- Adaptive zero-cross switching algorithm for extended relay life (patent pending)
- XCT Technology for major, minor, fine, and very fine motion detection
- Programmable circuit swapping eliminates need for rewiring to reassign circuits after installation of a dual-circuit product. (patent pending)
- Product ground current does not exceed 0.5 mA

### Environment

- Ambient operating temperature:
  32 °F to 104 °F (0 °C to 40 °C), 0%–90% humidity, non-condensing. Indoor use only.

### Warranty

- 5-Year Limited Warranty. For additional Warranty information, please visit www.lutron.com/TechnicalDocumentLibrary/Sensor_Warranty.pdf

### Sensor Detection

Lutron dual tech sensors operate by triggering initial occupancy using PIR technology, and maintain occupancy using both ultrasonic and PIR technology.

## Advanced Features

### Switching

- Adaptive zero-cross switching—maximizes relay life by switching at the point of minimum energy on the AC power curve (patent pending). Actively adapts to variations in relay timing.

### Additional Information on Sensors

- For single-circuit PIR Maestro occupancy sensor switch models, please see Lutron P/N 369666
- For Maestro occupancy sensor C•L dimmer models, please see Lutron P/N 369748
- For dual-circuit PIR Maestro occupancy sensor switch, please see Lutron P/N 369758
- For more information, please see www.lutron.com/occvacsensors
- Lutron Customer Support: 1.844.LUTRON1



| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

## Custom Settings

**Default settings shown in bold**

**- Timeout**

- 30 min
- **15 min**
- 5 min
- 1 min

Mode **- Sensor Modes**

Lights automatically turn off in all sensor modes

- **Occ -Occupancy mode (No ALD)** [1,2,3]
- Lrn - Occupancy with learning ALD mode
- Fixd - Occupancy with fixed ALD mode
- Vac - Vacancy mode (No ALD) [2,3]

1 MS-A102-XX, MS-B102-XX default is Occ
2 MS-A102-V-XX, MS-B102-V-XX is locked as Vac
3 MS-A202-XX, MS-B202-XX defaults are: Circuit 1 - Occ, Circuit 2 - Vac

**- Ultrasonic Sensitivity**

- High
- **Med**
- Low
- Off

PIR **- Passive Infrared Sensitivity**

- **High**
- Med
- Low
- Min

## Additional Settings

**Fixed ALD Light Level**

- Hi
- Med
- **Low***
- Min

* "Low" is the default setting for any sensor that is set by the user to: Occupancy with fixed ALD mode

**Off-While-Occupied**

- **Enabled**
- Disabled

**Walk-Thru Mode**

- Enabled
- **Disabled**

## Custom Settings - Details

**Ambient Light Detection (ALD) mode**

Lights turn on only when natural light in the room is below the set threshold.

– Learning: The ambient light threshold adjusts to the user's preference via manual interaction with the sensor switch.

– Fixed: Choose a fixed ALD light level from four pre-set options:
High, Medium, Low, and Minimum

**Manual Off-While-Occupied Options**

ENABLED (default setting)

– When the sensor switch is manually turned off, the sensor switch will not turn the lights back on automatically while the room is occupied.

– Once the room is vacated, the Auto-On feature returns to normal operation after the timeout period has expired.

– This may be the preference in conference rooms or classrooms while viewing presentations. This feature requires motions to keep the lights off.

DISABLED

– When the sensor switch is manually turned off, the Auto-On feature will return to normal operation after 25 seconds.

– This may be the preference in a restroom if the user always wants the lights to turn on upon entering and the lights to turn off when the room is vacant.

**Walk-Thru Mode**

ENABLED [1]

– If motion is not detected within 3 minutes after initial occupancy, the lights will turn off after 3 minutes, instead of the current timeout.

– This setting may be the preference in commercial applications where personnel may briefly trigger sensors during non-working hours.

DISABLED (default setting)

– When motion is detected, the lights will ALWAYS remain on for the entire timeout duration, regardless of the duration of occupancy detection.

1 1 minute timeout would be overridden if walk-thru mode is also ENABLED



| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

## Load Type and Capacity

| Control | Neutral Connection Required | Vacancy Only | Number of Circuits | TAA Compliant | Voltage/Load Type/Maximum Load (Anywhere in Gang) [1] | Minimum Load | 3-Way with Mechanical Switch | Multi-Location with Accessory Switch |
|---|---|---|---|---|---|---|---|---|
| MS-A102 | | | 1 | | 120 – 277 V~ Lighting 6 A [2]<br>120 V~ Fan 4.4 A (1/6 HP) [3] | 0 A | | |
| MS-A102-V | | ✓ | 1 | | | 0 A | | |
| MS-A202 | | | 2 | | | 0 A | | |
| MS-B102 | ✓ | | 1 | | | 0 A | ✓ | ✓ |
| MS-B102-V | ✓ | ✓ | 1 | | | 0 A | ✓ | ✓ |
| MS-B202 | ✓ | | 2 | | | 0 A | ✓ | |
| WMS-A102 | | | 1 | ✓ | | 0 A | | |
| WMS-A102-V | | ✓ | 1 | ✓ | | 0 A | | |
| WMS-A202 | | | 2 | ✓ | | 0 A | | |
| WMS-B102 | ✓ | | 1 | ✓ | | 0 A | ✓ | ✓ |
| WMS-B102-V | ✓ | ✓ | 1 | ✓ | | 0 A | ✓ | ✓ |
| WMS-B202 | ✓ | | 2 | ✓ | | 0 A | ✓ | |

[1] Ratings shown are per circuit.

[2] Sensor switch load type: Designed for use with permanently installed incandescent, halogen, MLV, ELV, CFL, LED, magnetic fluorescent, and electronic fluorescent lighting loads.

[3] When controlling light and fan loads simultaneously on a single-circuit, maximum load capacity per circuit is 4.4 A at 120 V~.

- Ground or neutral is required for product to function. If neither wire is present, consult a licensed electrician.
- For models MS-A102 and MS-A202, connect green-sleeved wire to ground only in retrofit and replacement applications. When neutral connection is available, remove green sleeve and connect the white wire to neutral.

## Sensor switch placement

- The sensor switch performs better with an unobstructed view of room occupants.
- Hot objects and moving air currents can affect the performance of the sensor switch. The sensor switch performs best when located 6 ft (1.8 m) or more away from hot objects or moving air currents.
- The PIR performance depends on a temperature differential between the ambient room temperature and that of room occupants. Warmer rooms may reduce the ability of the sensor switch to detect occupants.
- The ultrasonic performance can be affected by air currents and moving objects. Consider the effects of fans, HVAC vents, open windows, or moving objects when installing the sensor switch.
- If the sensor sees a specific area that is not desired (e.g., hallway), Lutron offers a lens mask kit (Lutron P/N 50013614) that can be ordered through Customer Support (1.844.LUTRON1). Alternatively, selectively placing opaque tape (e.g., painter's tape, electrical tape, masking tape) over certain parts of the lens can limit it's field of vision to block undesired detection areas. Masking the lens may effect ALD performance, but DOES NOT block ultrasonic frequencies.

### Definitions

***Major motion:*** movement of a person entering or passing through an area.

***Minor motion:*** movement of a person occupying an area and engaging in small activities (e.g., reaching for a telephone, turning the pages of a book, opening a file folder, picking up a coffee cup).

***Fine Motion:*** movement of a person occupying an area and engaging in very small activities (e.g., reading a magazine).

***Very Fine Motion:*** movement of a person occupying an area and engaging in very small activities (e.g., typing on a keyboard).




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

# Sensor switch placement *(continued)*

## NEMA WD7 Coverage


Major motion coverage: 900 ft$^2$ (81 m$^2$)

Minor motion coverage: 400 ft$^2$ (36 m$^2$)

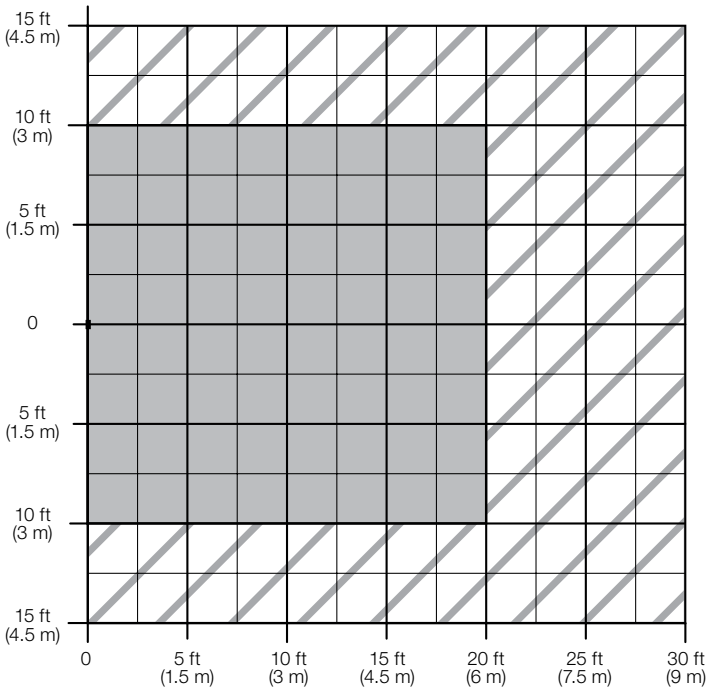



**Test Room Dimensions:** 37 ft x 38 ft (11.28 m x 11.6 m)
**Test Floor Surface Material:** Carpet
**Sensor Coverage Angle:** 180 °
**Major motion coverage:** Initial trigger motion detection
**Minor motion coverage:** Maintained motion detection

## Passive Infrared Beam Diagram
**(For Reference Only)**

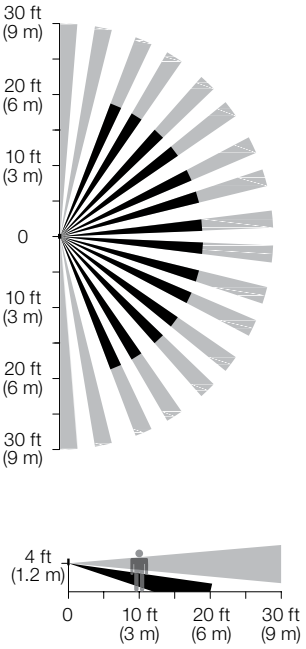


## Ultrasonic Coverage
**(For Reference Only)**

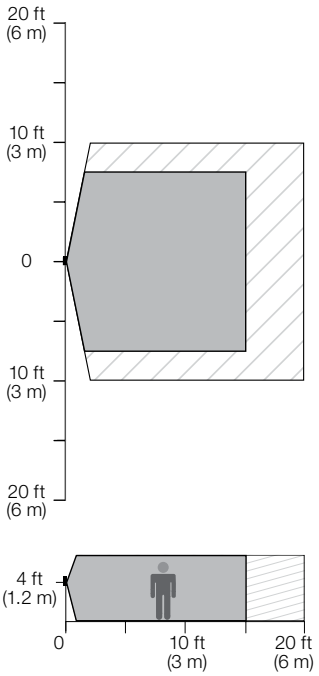


Ultrasonic Frequency: 40 kHz




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |


## Dimensions - single-circuit
## MS-A102, MS-A102-V, MS-B102, MS-B102-V

Measurements shown as: in (mm).

**Front View** **Side View**

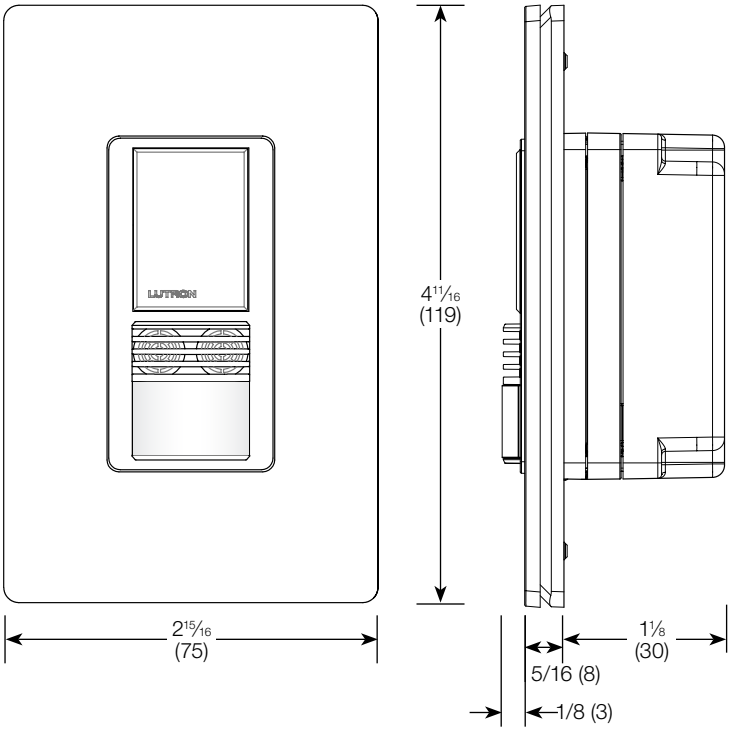



## Operation

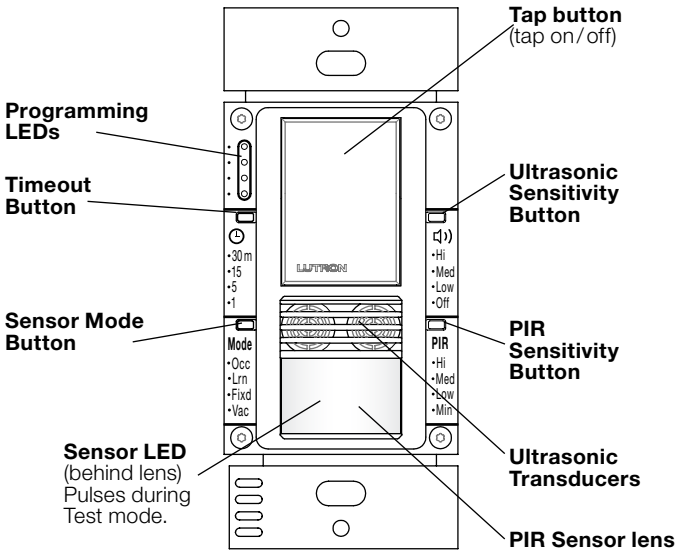




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

## Mounting

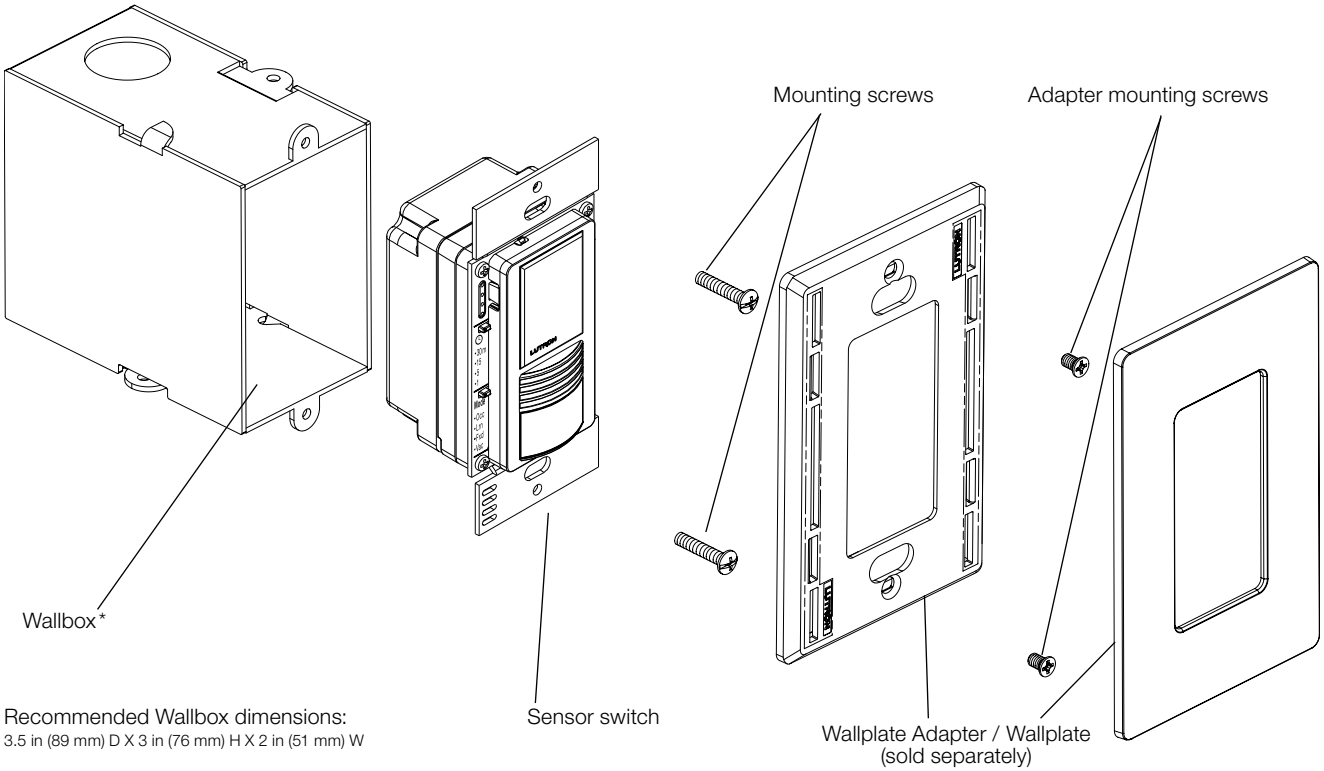


* Recommended Wallbox dimensions:
3.5 in (89 mm) D X 3 in (76 mm) H X 2 in (51 mm) W




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

369773i 8 04.08.24


## Wiring Installations with the Maestro Dual Technology Sensor Switch A102

In order to function, the dual technology sensor switch must have a ground or neutral wire connected. Connect green-sleeved wire to ground only in retrofit and replacement applications. When a neutral connection is available, remove green sleeve and connect white wire to neutral. Before installing wallplate, program all desired settings.

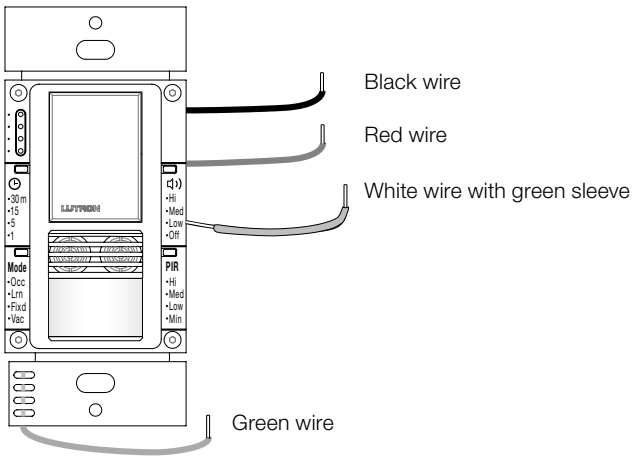


## Wiring Installations with the Maestro Dual Technology Sensor Switch B102

Before installing wallplate, program all desired settings.

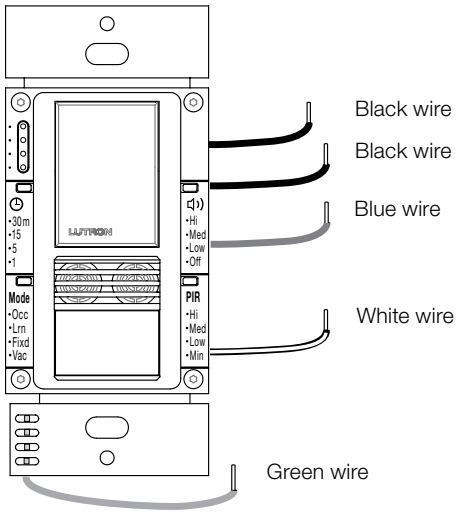





| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |


## Dimensions - dual-circuit MS-A202, MS-B202

Measurements shown as: in (mm).

**Front View** **Side View**

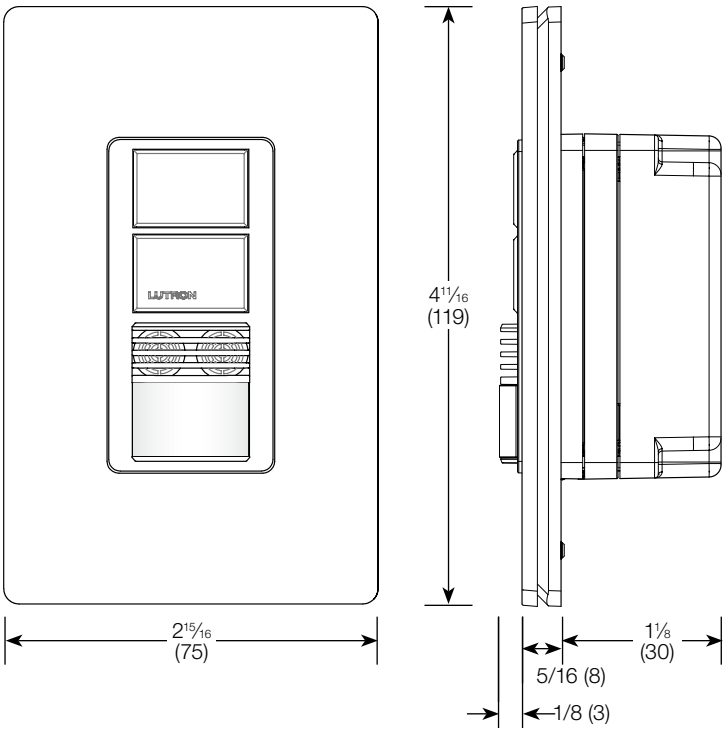



## Operation

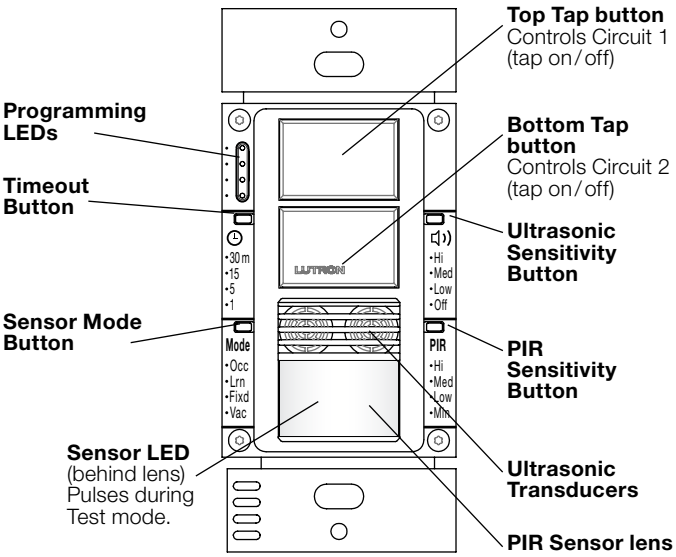




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

## Mounting

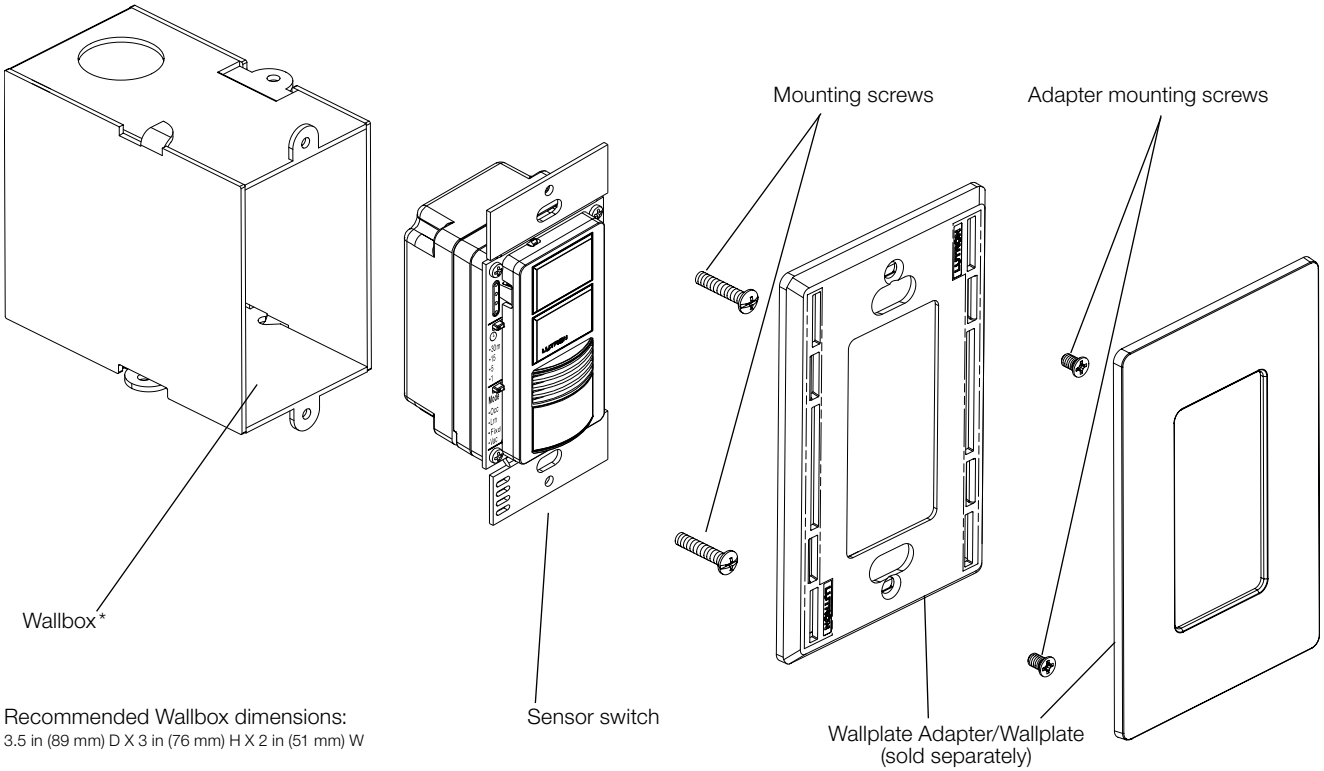



* Recommended Wallbox dimensions:
3.5 in (89 mm) D X 3 in (76 mm) H X 2 in (51 mm) W



| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |


## Wiring Installations with the Maestro Dual Technology Sensor Switch A202

In order to function, the dual technology sensor switch must have a ground or neutral wire connected. Connect green-sleeved wire to ground only in retrofit and replacement applications. When a neutral connection is available, remove green sleeve and connect white wire to neutral. Before installing wallplate, program all desired settings.

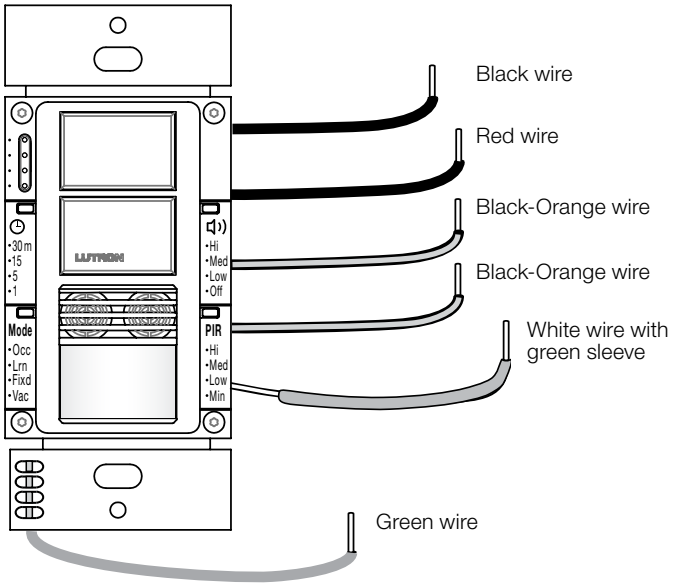


## Wiring Installations with the Maestro Dual Technology Sensor Switch B202


Before installing wallplate, program all desired settings.

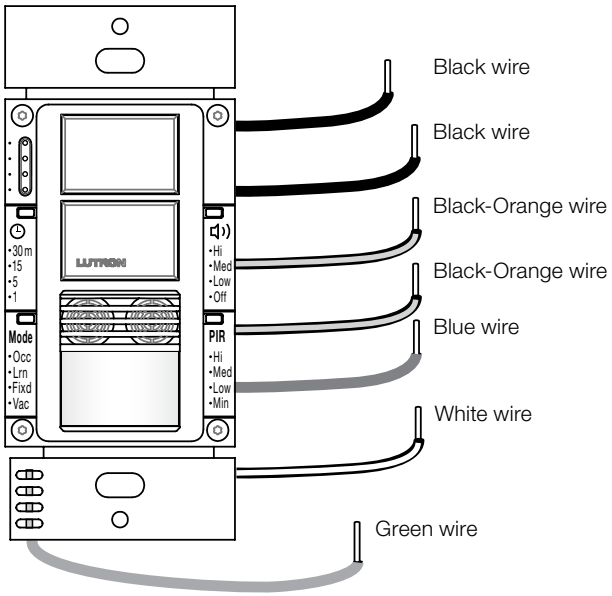

# Wiring Diagrams - Single-Circuit

## Wiring Diagram 1


**Single pole wiring - single-circuit (MS-A102, MS-A102-V) with neutral**

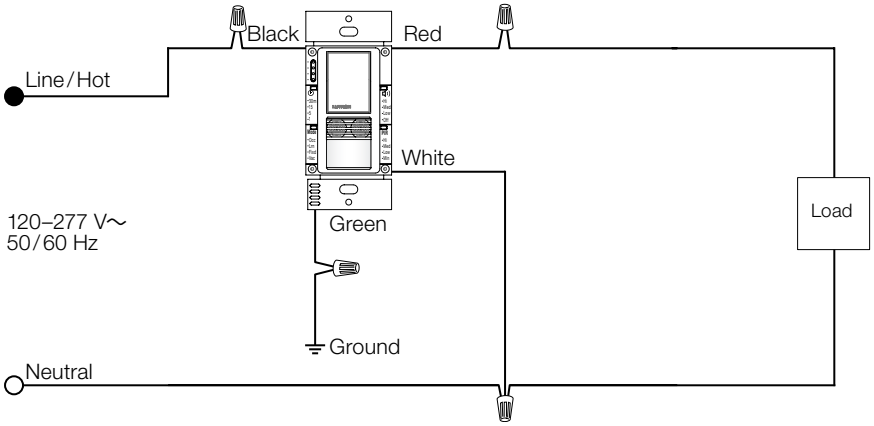


Note: When a neutral connection is available, remove green sleeve and connect the white wire to neutral

## Wiring Diagram 2


**Single pole wiring - single-circuit (MS-A102, MS-A102-V) without neutral**

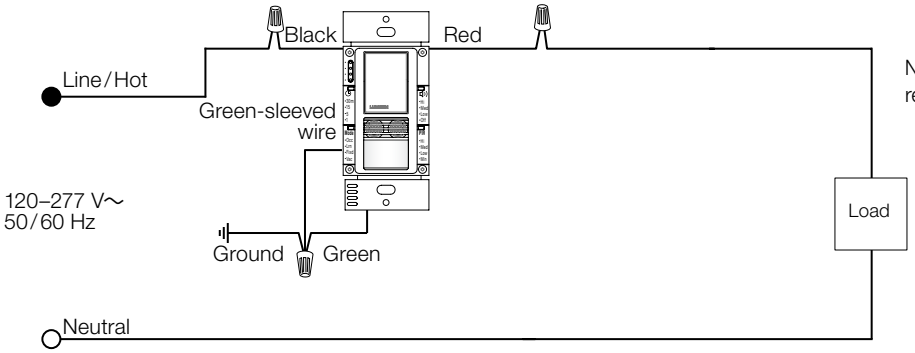


Note: Connect green-sleeved wire to ground only in retrofit and replacement applications.

## Wiring Diagram 3

**Single pole wiring - single-circuit (MS-B102, MS-B102-V)**

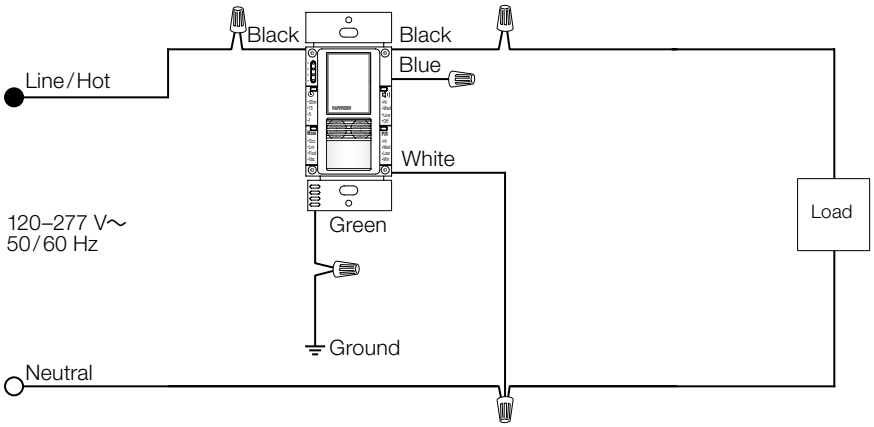


*continued on next page...*




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

# Wiring Diagrams - Single-Circuit *(continued)*



## Wiring Diagram 4


**120 V~ Multi-location installation with Maestro accessory switches (MS-B102, MS-B102-V)**

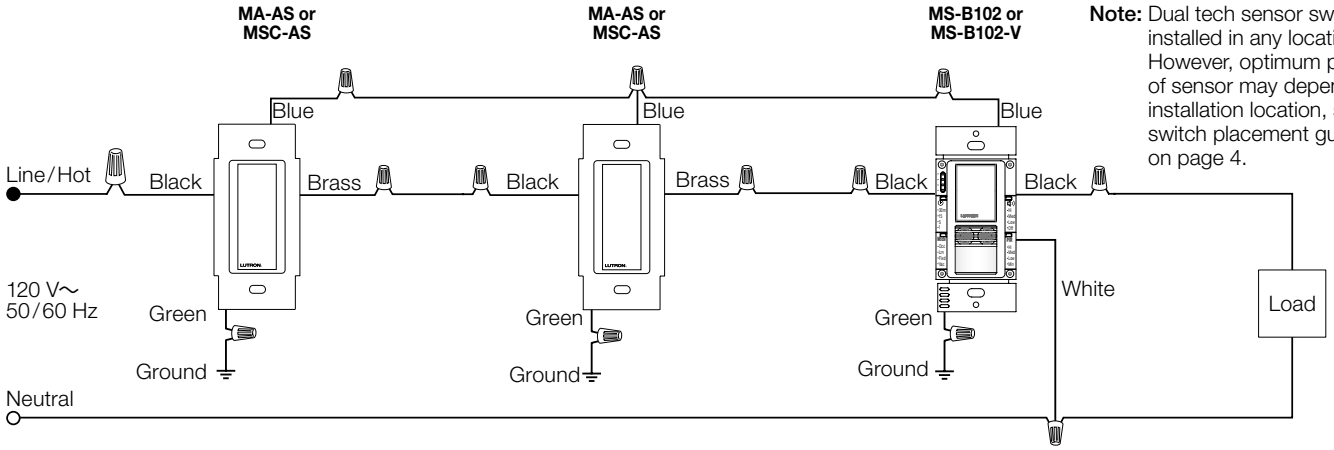


**Note:** Dual tech sensor switch can be installed in any location. However, optimum performance of sensor may depend upon installation location, see sensor switch placement guidelines on page 4.

## Wiring Diagram 5


**220/240 V~ Multi-location installation with Maestro accessory switches (MS-B102, MS-B102-V)**

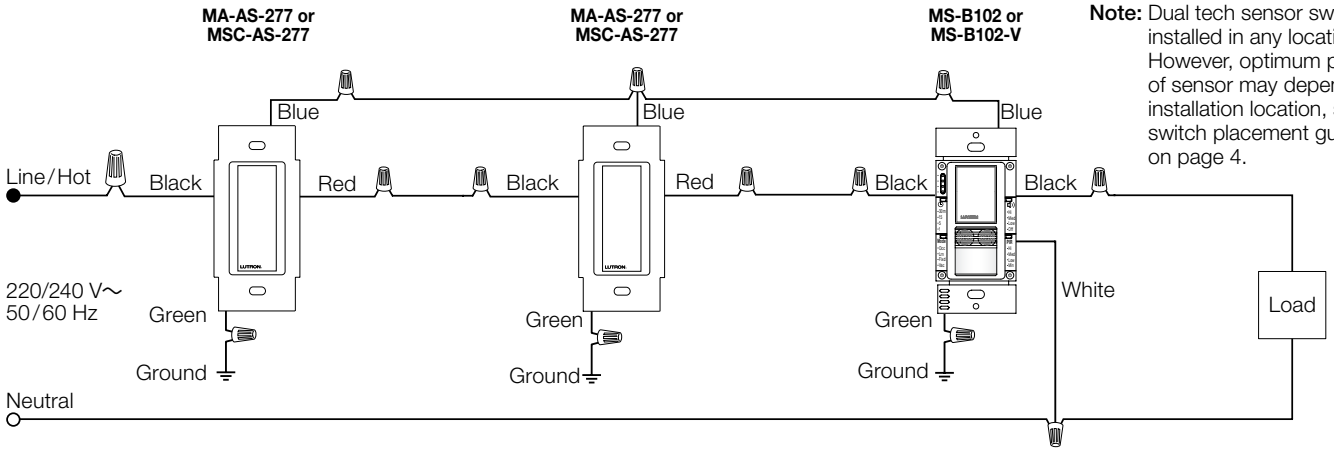


**Note:** Dual tech sensor switch can be installed in any location. However, optimum performance of sensor may depend upon installation location, see sensor switch placement guidelines on page 4.

## Wiring Diagram 6

**277 V~ Multi-location installation with Maestro accessory switches (MS-B102, MS-B102-V)**

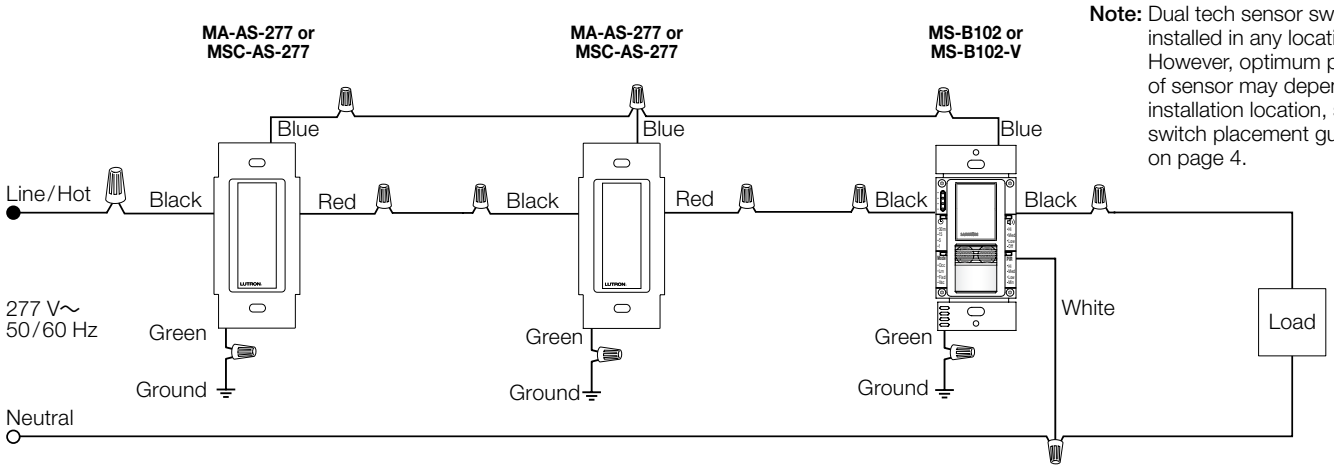


**Note:** Dual tech sensor switch can be installed in any location. However, optimum performance of sensor may depend upon installation location, see sensor switch placement guidelines on page 4.




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

# Wiring Diagrams - Single-Circuit *(continued)*

## Wiring Diagram 7

### 3-way installation - single-circuit (MS-B102, MS-B102-V)

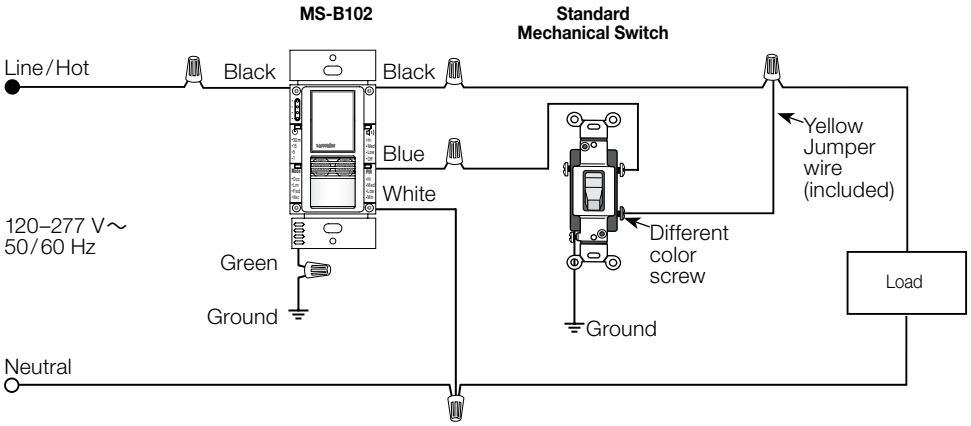


**Note:** Dual tech sensor switch can be installed in any location. However, optimum performance of sensor may depend upon installation location, see sensor switch placement guidelines on page 4.

### 3-way installation

For retrofit 3-way installations the mechanical switch needs to be rewired as shown in the diagram below after wiring the dual tech sensor switch. Otherwise the 3-way installation will not work as expected. Single pole mechanical switches may also be used in a 3-way installation with MS-B102, MS-B102-V and MS-B202 models.


1. Connect Ground: Ensure the bare copper or green ground wire from the wallbox is connected to the green ground screw of the mechanical switch.

2. Tag circuit Common: Your 3-way mechanical switch should have three screw terminals, two of the same color, and one of a different color. Tag the wire that is connected to the screw terminal of a different color.

3. Identify the wire that matches the color of the wire you connected to the blue wire of the Maestro dual technology occupancy sensor switch. Connect this wire to one of the two terminals of the same color.


4. Combine the tagged wire, the remaining wire and yellow jumper wire (included) using a wire connector. Connect the other end of jumper wire to the different color screw.

**Traditional 3-way mechanical switch wiring**

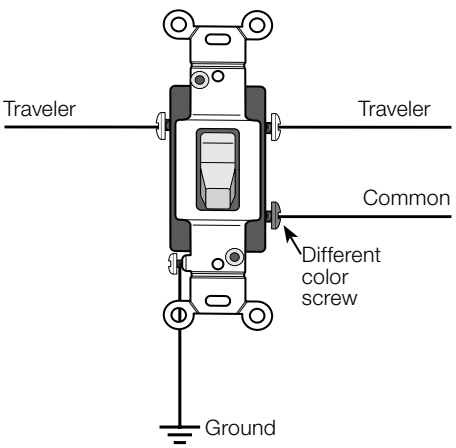


Rewire to

**3-way mechanical switch wiring with dual tech sensor switch**

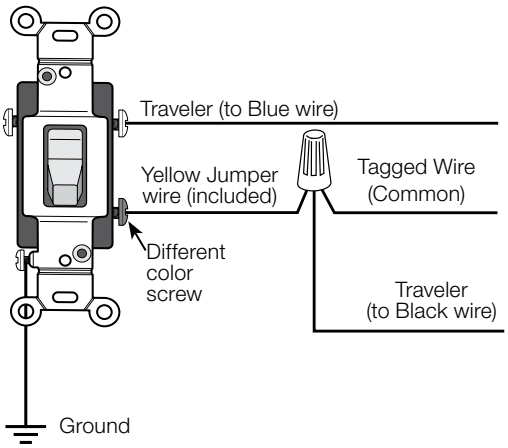





| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

# Wiring Diagrams - Dual-Circuit

## Wiring Diagram 1


**Single pole, single breaker feed wiring - dual-circuit (MS-A202) with neutral**

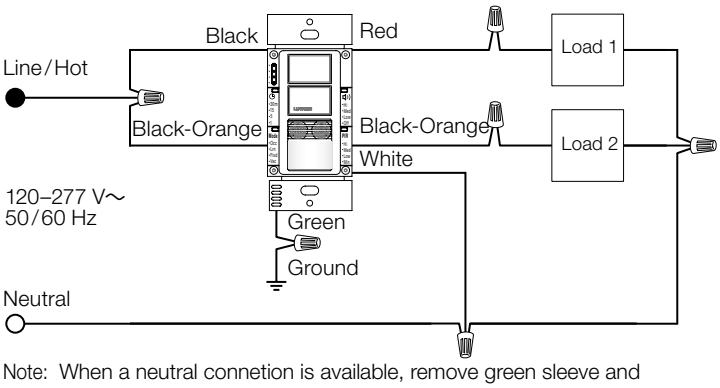


Note: When a neutral connetion is available, remove green sleeve and connect the white wire to neutral.

## Wiring Diagram 2


**Single pole, single breaker feed wiring - dual-circuit (MS-A202) without neutral**

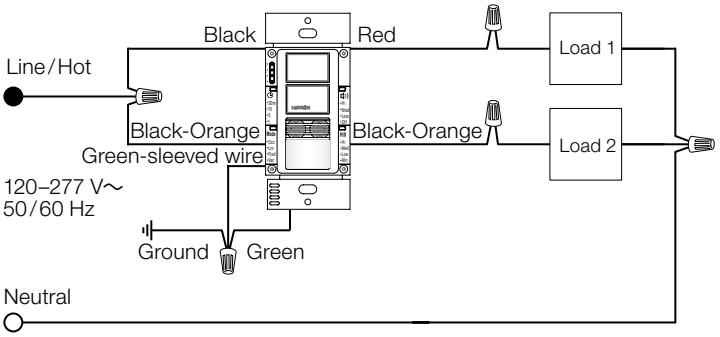


Note: Connect green-sleeved wire to ground only in retrofit and replacement applications.


## Wiring Diagram 3

**Single pole, single breaker feed wiring - dual-circuit (MS-B202)**

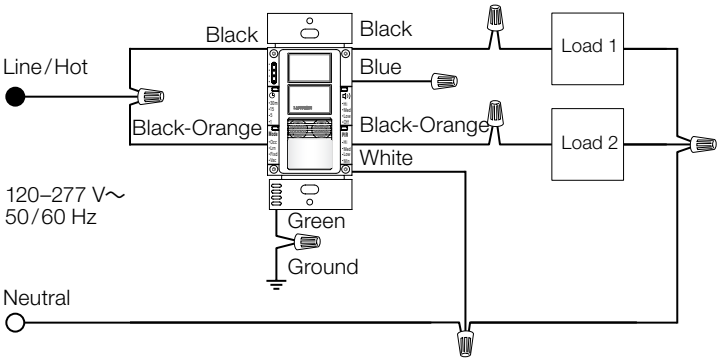


## Wiring Diagram 4

**Single pole, two breaker feed wiring - dual-circuit (MS-A202) with neutral**

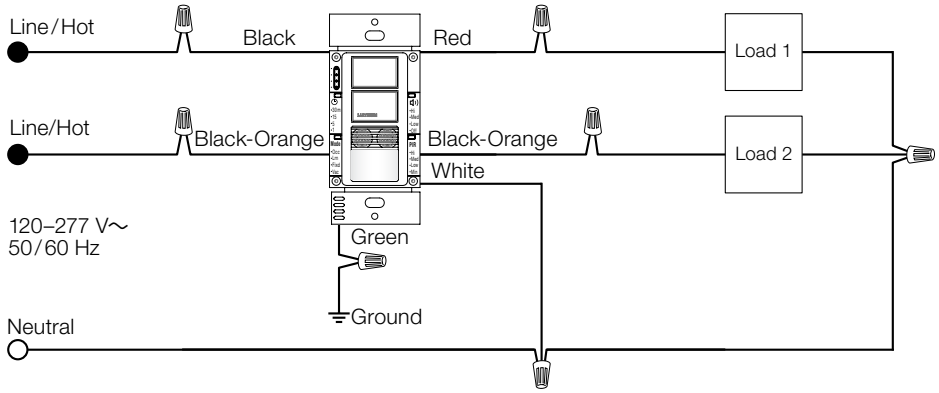


Note: When a neutral connection is available, remove green sleeve and connect the white wire to neutral.

Wiring must comply with NEC® code for wiring multiple branch circuits. Where two or more branch circuits supply devices or equipment on the same yoke, a means to simultaneously disconnect the ungrounded conductors supplying those devices shall be provided at the point at which the branch circuits originate.

*continued on next page...*




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

# Wiring Diagrams - Dual-Circuit *(continued)*

## Wiring Diagram 5


**Single pole, two breaker feed wiring - dual-circuit (MS-A202) without neutral**

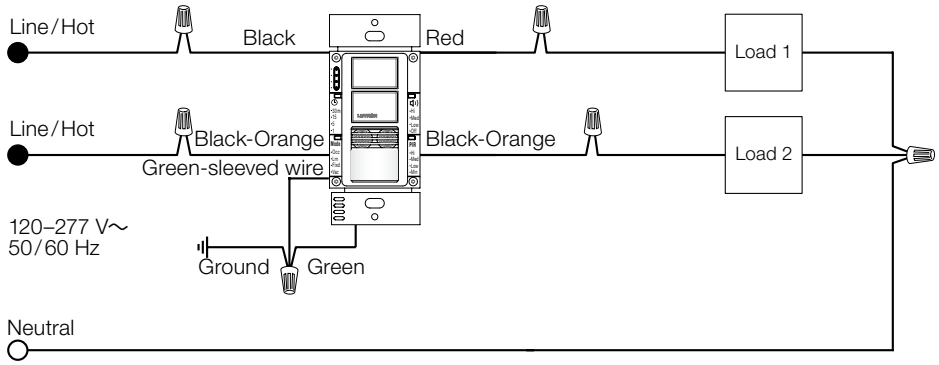


Note: Connect green-sleeved wire to ground only in retrofit and replacement applications.

## Wiring Diagram 6

**Single pole, two breaker feed wiring - dual-circuit (MS-B202)**

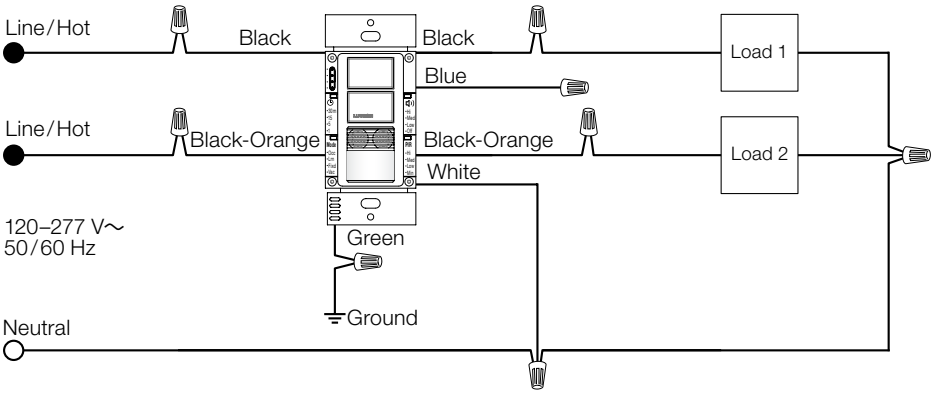



Wiring must comply with NEC® code for wiring multiple branch circuits. Where two or more branch circuits supply devices or equipment on the same yoke, a means to simultaneously disconnect the ungrounded conductors supplying those devices shall be provided at the point at which the branch circuits originate.

# Wiring Diagrams - Dual-Circuit *(continued)*

## Wiring Diagram 7

### 3-way installation, single breaker feed wiring: dual-circuit (MS-B202)

**NOTE:** Do not use Maestro accessory switches with MS-B202.

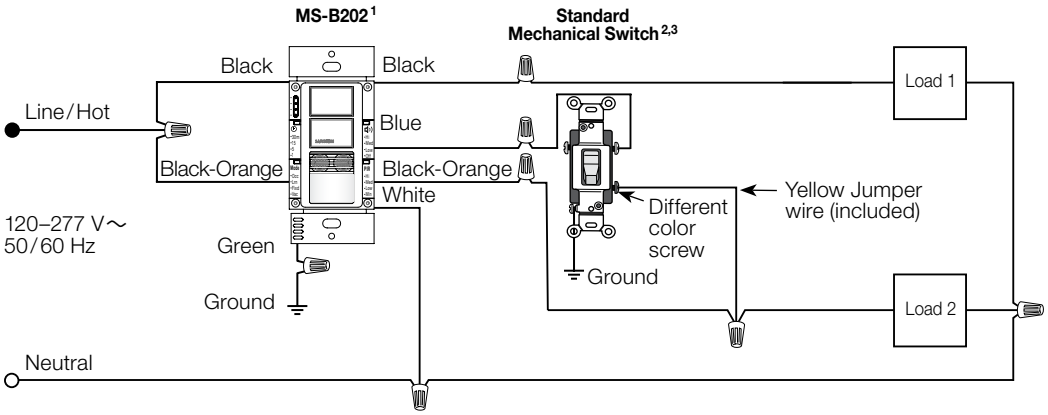



**Note:** Optimum performance of sensor may depend upon installation location, see sensor switch placement guidelines on page 4.

## Wiring Diagram 8

### 3-way installation, two breaker feed wiring: dual-circuit (MS-B202)

Wiring must comply with NEC® code for wiring multiple branch circuits. Where two or more branch circuits supply devices or equipment on the same yoke, a means to simultaneously disconnect the ungrounded conductors supplying those devices shall be provided at the point at which the branch circuits originate.

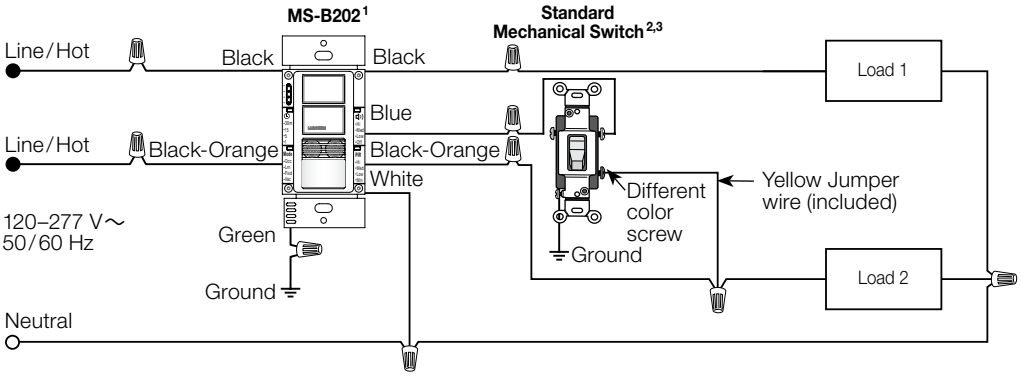


**Note:** Do not use Maestro accessory switches with MS-B202.

**Note:** Optimum performance of sensor may depend upon installation location, see sensor switch placement guidelines on page 4.

1 Dual tech sensor switch can be installed in any location.

2 Mechanical switch may be wired to **either** circuit, and will control both. **Do NOT** wire mechanical switch to **both** circuits.

3 You may use no more than one mechanical switch with a dual-circuit dual tech sensor switch.



| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |


369773i 18 04.08.24

## 3-way installation

For retrofit 3-way installations the mechanical switch needs to be rewired as shown in the diagram below after wiring the dual tech sensor switch. Otherwise the 3-way installation will not work as expected. Single-pole mechanical switches may also be used in a 3-way with MS-B102, MS-B102-V and MS-B202 models.


1. Connect Ground: Ensure the bare copper or green ground wire from the wallbox is connected to the green ground screw of the mechanical switch.
2. Tag circuit Common: Your 3-way mechanical switch should have three screw terminals, two of the same color, and one of a different color. Tag the wire that is connected to the screw terminal of a different color.
3. Identify the wire that matches the color of the wire you connected to the blue wire of the Maestro dual technology occupancy sensor switch. Connect this wire to one of the two terminals of the same color.
4. Combine the tagged wire, the remaining wire and yellow jumper wire (included) using a wire connector. Connect the other end of jumper wire to the different color screw.

**Traditional 3-way mechanical switch wiring**

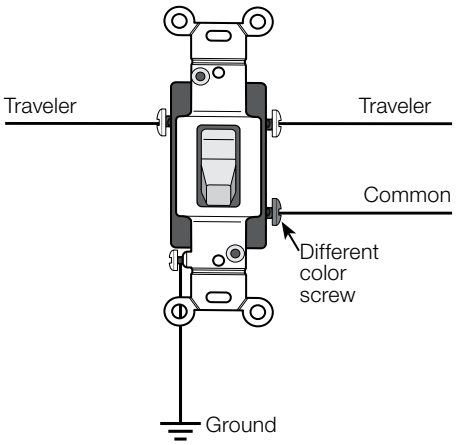


Rewire to

**3-way mechanical switch wiring with dual tech sensor switch**

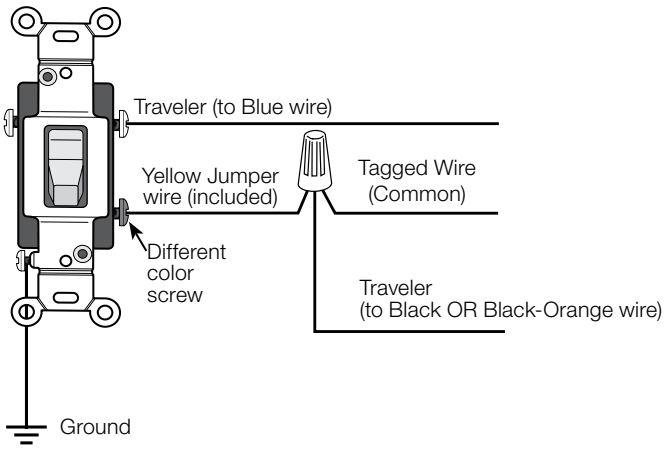


## How loads operate in 3-way with dual-circuit sensor switch (MS-B202)


| | Initial Load State | | After flipping 3-way mechanical switch | |
|---|---|---|---|---|
| | **Circuit 1** | **Circuit 2** | **Circuit 1** | **Circuit 2** |
| **When All Lights are OFF** | Off | Off | On | On |
| **When All Lights are ON** | On | On | Off | Off |
| **When One Circuit is ON** | On | Off | Off | Off |
| | Off | On | Off | Off |




| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |

# Colors and Finishes


## Gloss Finishes




White
WH

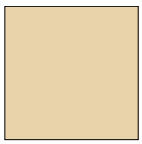


Ivory
IV

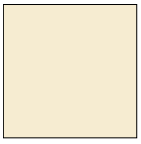

Almond
AL

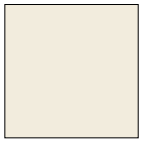

Light Almond
LA



Gray
GR




Brown
BR



Black
BL


## Satin Finishes




Snow
SW




Midnight
MN



Taupe
TP



Biscuit
BI

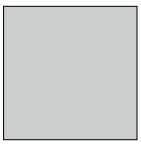

Palladium
PD



Hot
HT

For the latest color offerings please see our website:
http://www.lutron.com/satincolors

- Due to printing limitations, colors and finishes shown cannot be guaranteed to match actual product colors perfectly.
- Color chip keychains are available for more precise color matching:
  Gloss Finishes: DG-CK-1
  Satin Finishes: SF-CK-1

The Lutron logo, Lutron, Maestro, XCT, and C•L are trademarks or registered trademarks of Lutron Electronics Co., Inc. in the US and/or other countries.
All other product names, logos, and brands are property of their respective owners.



| Job Name: | Model Numbers: | |
|---|---|---|
| | | |
| Job Number: | | |