

FIGURE C

Group G

Primary Voltage: 110 X 220 120 X 240 115 X 230 **Secondary Voltage:** 12 X 24 11.5 X 23 11 X 22

| VA Rating | Catalog Number | Mtg. Fig. | Output | Overall Dimensions | | Mounting Centers | | Mounting Slot | Height with | Depth with | Approx. Ship | Optional Primary | Optional Unfused and | |
|--------------|-------------------|--------------|-----------|-----------------------|------|---------------------|------|------------------|----------------|-----------------|-----------------|---------------------|-------------------------|-------------------------------|
| | | | Amps | A | В | U | D | E | GXH | Finger Guard | Finger Guard | Weight Lbs. | Fuse Kit P/N | Fused Finger Guard Kit P/N |
| 50 | PH50PG | Α | 4.17/2.08 | 3.00 | 4.38 | 3.19 | 2.50 | 2.25 | 0.22 x 0.44 | 4.00 | 5.82 | 3.50 | PFK1 | FG1*/FGF1 |
| 75 | PH75PG | Α | 6.25/3.13 | 3.25 | 3.88 | 3.56 | 2.63 | 2.50 | 0.22 x 0.44 | 4.37 | 5.32 | 3.54 | PFK1 | FG2*/FGF2 |
| 100 | PH100PG | Α | 8.33/4.17 | 3.25 | 4.19 | 3.63 | 2.63 | 2.63 | 0.22 x 0.44 | 4.50 | 5.63 | 4.50 | PFK1 | FG2*/FGF2 |
| 150 | PH150PG | В | 12.5/6.25 | 4.00 | 4.94 | 3.81 | 3.38 | 2.75 | 0.22 x 0.75 | 4.50 | 6.44 | 5.70 | PFK2 | FG3 |
| 250 | PH250PG | В | 20.8/10.4 | 4.50 | 5.44 | 3.81 | 3.75 | 3.13 | 0.22 x 0.75 | 4.50 | 6.94 | 7.50 | PFK2 | FG3 |
| 350 | PH350PG | В | 29.2/14.6 | 4.50 | 5.19 | 4.44 | 3.75 | 3.75 | 0.22 x 0.75 | 5.18 | 6.69 | 10.1 | PFK3 | FG4 |
| 500 | PH500PG | В | 41.7/20.8 | 4.75 | 5.94 | 4.31 | 4.06 | 3.81 | 0.31 x 0.94 | 5.13 | 7.44 | 14.2 | PFK3 | FG4 |
| 750 | PH750PG | С | 62.5/31.3 | 5.25 | 6.25 | 4.94 | 4.38 | 4.31 | 0.31 x 0.81 | 5.56 | 7.88 | 16.6 | PFK3 | FG5 |
| 1000 | PH1000PG | С | 83.3/41.7 | 5.25 | 6.81 | 4.94 | 4.50 | 4.44 | 0.31 x 0.81 | 5.56 | 8.31 | 23.6 | PFK3 | FG5 |

Secondary fuse clips and fuse clip mounting screws supplied standard with transformers up to and including 500VA. Primary and Secondary voltage links/jumpers supplied standard with transformers.

All dimensions in inches

Group H

Primary Voltage: 550/440/220 440/220 c us C E 50/60 Hertz 600/480/240 || 575/460/230 **Secondary Voltage:** 120/100 115/95

| VA | Catalog Number | Mtg. Fig. | Output Amps | Overall Dimensions | | Mounting Centers | | Mounting Slot | Height with | Depth with | Approx. Ship | Optional Primary | Optional Unfused and | |
|--------|-------------------|--------------|----------------|-----------------------|------|---------------------|------|------------------|----------------|-----------------|-----------------|---------------------|-------------------------|-------------------------------|
| Rating | | | | А | В | С | D | E | GXH | Finger Guard | Finger Guard | Weight Lbs. | Fuse Kit P/N | Fused Finger Guard Kit P/N |
| 50 | РН50МВМН | Α | 0.43 | 3.25 | 4.06 | 3.63 | 2.63 | 2.63 | 0.22 x 0.44 | 4.50 | 5.50 | 4.10 | PFK5 | FG2*/FGF2 |
| 75 | РН75МВМН | Α | 0.65 | 3.25 | 4.19 | 3.63 | 2.63 | 2.63 | 0.22 x 0.44 | 4.50 | 5.63 | 4.50 | PFK5 | FG2*/FGF2 |
| 100 | РН100МВМН | В | 0.87 | 4.00 | 4.63 | 3.81 | 3.38 | 2.75 | 0.22 x 0.75 | 4.50 | 6.25 | 4.90 | PFK6 | FG3 |
| 150 | РН150МВМН | В | 1.30 | 4.00 | 5.44 | 3.81 | 3.38 | 2.75 | 0.22 x 0.75 | 4.50 | 6.94 | 7.60 | PFK6 | FG3 |
| 250 | РН250МВМН | В | 2.17 | 4.50 | 5.19 | 4.44 | 3.75 | 3.75 | 0.22 x 0.75 | 5.18 | 6.69 | 10.1 | PFK6 | FG4 |
| 350 | РН350МВМН | В | 3.04 | 4.50 | 5.56 | 4.44 | 3.75 | 3.75 | 0.22 x 0.75 | 5.18 | 7.06 | 11.0 | PFK7 | FG4 |
| 500 | РН500МВМН | В | 4.35 | 4.75 | 6.69 | 4.31 | 4.06 | 4.50 | 0.31 x 0.94 | 5.13 | 8.19 | 16.3 | PFK7 | FG4 |
| 750 | РН750МВМН | В | 6.52 | 5.25 | 6.81 | 4.94 | 4.50 | 4.44 | 0.31 x 0.81 | 5.56 | 8.31 | 23.6 | PFK7 | FG5 |
| 1000 | РН1000МВМН | В | 8.70 | 5.25 | 8.19 | 4.94 | 4.50 | 5.81 | 0.31 x 0.81 | 5.56 | 9.69 | 31.2 | PFK7 | FG5 |
| 1500 | РН1500МВМН | В | 13.0 | 5.25 | 8.19 | 4.94 | 4.50 | 6.06 | 0.38 x 1.0 | 5.56 | 9.69 | 32.0 | PFK7 | FG5 |

Secondary fuse clips, fuse clip mounting screws and primary and secondary voltage links/jumpers supplied standard with transformers. *Note: Unfused finger guard kits are marked with an asterisk, for more information refer to page 43 Refer to page 70 for wiring schematic drawing. Custom voltage and VA sizes available upon request.

All dimensions in inches





^{*}Note: Unfused finger guard kits are marked with an asterisk, for more information refer to page 43.

Refer to page 69 for wiring schematic drawing. Custom voltages and VA sizes available upon request.

*** Available with FACTORY INSTALLED Primary and Secondary Fuse Kits up to 1000VA. To order, add the suffix "-FK" to the above part number. Refer to page 42 for details. ***

Field Installed Fuse Kits

Standard Secondary Fuse Kits (Field Installed)

All HPS Imperator control transformers are supplied with standard secondary fuse kits which include: 13/32" x 1 1/2" midget/type CC fuse clips, fuse clip mounting screws, primary and secondary voltage links and the PHAK1 instruction sheet (note: secondary fuse clips and fuse clip mounting screws are not supplied on the PH750PG, PH1000PG, PH750MLI, and PH1000MLI).

Optional Primary Fuse Kits (Field Installed)

All HPS Imperator series machine tool industrial control transformers up to and including 1500VA are available with the following optional primary fuse kits:

| Kit Part | Applicable Transformer | Applicable | Parts Included in Kit |
|------------------------------------------------------|-----------------------------------------------------|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Number | Part Number Suffix's | VA Sizes | |
| PFK1 PFK2 PFK3 PFK4 PFK5 PFK6 PFK7 | Refer to Spe Tables on Pages Optional Primary | 36 to 41 for | 4 fuse clips, 4 mtg. screws, PHAK1 instruction sheet 4 fuse clips, 4 mtg. screws, PHAK1 instruction sheet 4 fuse clips, 4 mtg. screws, PHAK1 instruction sheet 4 fuse clips, 4 mtg. screws, 1 jumper, 1 finger guard, PHAK1 instruction sheet 4 fuse clips, 4 mtg. screws, 1 jumper, 1 finger guard, PHAK1 instruction sheet 4 fuse clips, 4 mtg. screws, 1 jumper wire, PHAK1 instruction sheet 4 fuse clips, 4 mtg. screws, 1 jumper wire, PHAK1 instruction sheet |

Note: Maximum allowable current rating on all primary and secondary fuse kits is 30 amps.

Factory Installed Fuse Kits

Factory Installed Primary and Secondary Fuse Kits

HPS now stocks some HPS Imperator series voltage groups with FACTORY INSTALLED primary and secondary fuse clips. To order, just add the suffix "-FK" to the end of the standard part number.

Factory installed fusing only available on units up to 1500VA. The voltage groups that are stocked are:

Group C (p/n: PH***MQMJ-FK) | Group G (p/n: PH***PG-FK) | Group I (p/n: PH***MLI-FK)

On PH750PG-FK, PH1000PG-FK, PH750MLI-FK, and PH1000MLI-FK, only primary fuse clips are included on factory installed units. Secondary fuse clips are not included or available on these units.


Other voltage groups available with factory installed fuse kits. Please contact your HPS sales or customer service representative for details.

Note: All factory installed fuse kits are pre-wired at the transformers highest primary voltage and the lowest secondary voltage. To hook up at a different primary or secondary voltage, please refer to the wiring instruction sheet included with the transformer.




Sample Accessory Drawing for Fuse Clips

(for 50, 75 and 100VA)

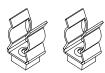


Sample Accessory Drawing for Fuse Clips

(for 150VA to 1500VA)

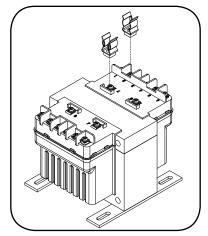

Sample Assembly Drawing for Secondary Fuse Clip Installation

(For 150VA to 1500VA)

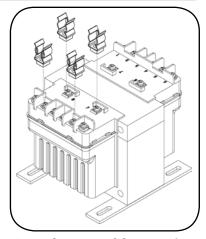

Sample Assembly Drawing for Primary Fuse Clip Installation


(For 150VA to 1500VA)

Note: HPS Imperator primary and secondary fuse kits are not suitable for branch circuit applications!




HPS Imperator - Wiring Schematic Drawings continued

Group G

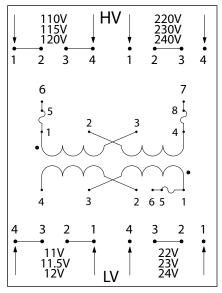

PH***PG Schematic for 50, 75 and 100VA Units

| _ | Voltage mary V | | Install Supplied Links Between Terminals | Supply Lines Connect To | Install Fuse Clips To |
|-----|-------------------|-----|---------------------------------------------|----------------------------|--------------------------|
| 120 | 115 | 110 | 1-2, 3-4 | 1, 4 | Unfused |
| 240 | 230 | 220 | 2-3 | 1, 4 | Unfused |
| 120 | 115 | 110 | 1-2, 3-4 | 6, 7 | 1-5, 4-8 |
| 240 | 230 | 220 | 2-3 | 6, 7 | 1-5, 4-8 |
| | Voltage | | Install Supplied Links Between Terminals | Load Lines Connect To | Install Fuse Clips To |
| 12 | 11.5 | 11 | 3-4, 1-2 | 1, 4 | Unfused |
| 24 | 23 | 22 | 2-3 | 1, 4 | Unfused |
| 12 | 11.5 | 11 | 3-4, 1-2 | 4, 6 | 1-5 |
| 24 | 23 | 22 | 2-3 | 4, 6 | 1-5 |

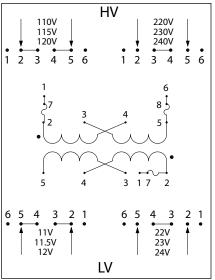

PH***PG Schematic for 150VA to 500VA Units

| High Voltage (| | Install Supplied Links | Supply Lines | Install Fuse |
|----------------------|--------------------------|------------------------------------|------------------------------|--------------------------------------------|
| (Primary Vol | | Between Terminals | Connect To | Clips To |
| 240 230 2 120 115 | 110 220 110 220 | 2-3, 4-5 3-4 2-3, 4-5 3-4 | 2, 5 2, 5 1, 6 1, 6 | Unfused Unfused 2-7, 5-8 2-7, 5-8 |
| Low Voltage (| | Install Supplied Links | Load Lines | Install Fuse |
| (Secondary Vo | | Between Terminals | Connect To | Clips To |
| 24 23 12 11.5 | 11 22 11 22 | 4-5, 2-3 3-4 4-5, 2-3 3-4 | 2, 5 2, 5 1, 5 1, 5 | Unfused Unfused 2-7 2-7 |

| HV 110V 220V 230V 240V 120V 120 | • 6 |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|
| 1 6 8 5 7 8 5 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 8 5 6 6 8 5 6 8 5 6 6 8 5 6 6 8 5 6 6 8 5 6 6 8 5 6 6 6 5 6 6 6 6 | |
| 4 3 2 1 | |
| 4 3 2 1 11V 11.5V 12V LV | |

PH***PG Schematic for 750VA and 1000VA Units

| High Voltage (| | Install Supplied Links | Supply Lines | Install Fuse |
|------------------------|--------------------------|------------------------------------|------------------------------|--------------------------------------------|
| (Primary Vol | | Between Terminals | Connect To | Clips To |
| 240 230 2 120 115 1 | 110 220 110 220 | 2-3, 4-5 3-4 2-3, 4-5 3-4 | 2, 5 2, 5 1, 6 1, 6 | Unfused Unfused 2-7, 5-8 2-7, 5-8 |
| Low Voltage (| | Install Supplied Links | Load Lines | Install Fuse |
| (Secondary Vo | | Between Terminals | Connect To | Clips To |
| | 11 | 3-4, 1-2 | 1, 4 | Unfused |
| | 22 | 2-3 | 1, 4 | Unfused |

Note: secondary fuse clips not available on PH750PG or PH1000PG.

