


## Walker<sup>®</sup> Infloor Systems

# Ratchet-Pro<sup>™</sup> 881 PVC Floor Box 895DCC Cover

### INSTALLATION INSTRUCTIONS


### **Before Pour:**

- **1.** Locate box position. Orientation of duplex receptacle is aligned with the conduit.
- 2. Cement conduit closure plugs to unused ports and conduit reducers if reduction from the 1" [25mm] hubs is required.
- **3.** Secure box to grade or form using nails, screws, rebar and wire or other appropriate means.
- 4. Cement conduit feed to hubs/reducers.
- 5. Pour concrete to required height (2 1/4" to 6 1/2" [57mm to 165mm]).
- 6. If used for dual service, use the center hubs for power and the outer hubs for low voltage.

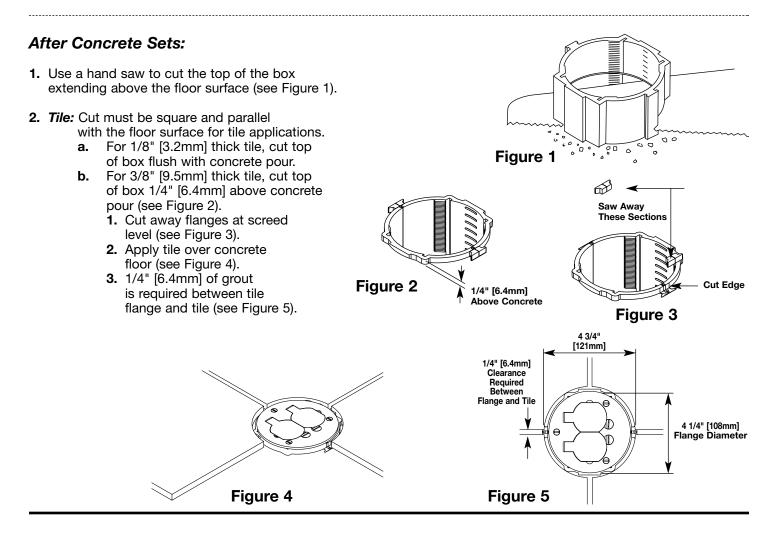

Walker<sup>®</sup> electrical systems conform to and should be properly grounded in compliance with requirements of the current National Electrical Code or codes administered by local authorities.

All electrical products may present a possible shock or fire hazard if improperly installed or used. Walker electrical products may bear the mark as UL Listed and/or Classified and should be installed in conformance with current local and/or the National Electrical Code.

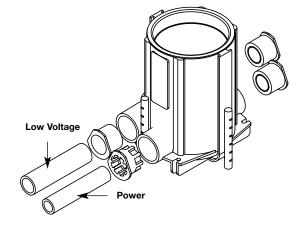

### After Concrete Sets Continued:

- **3.** *Carpet:* If floor covering is greater than 5/16" [7.9mm] thick, allow additional amount of the box to project above the floor to compensate. *Example: For 3/8*" [9.5mm] thick carpet and padding, subtract 5/16" [7.9mm] from 3/8" [9.5mm] and allow an additional 1/16" [1.6mm] of the box to extend above the floor surface.
- 4. When Installing Cat. No 895DCC on Wood Floor Covering: Cut must be square and parallel with the floor

Cut must be square and parallel with the floor surface. Cut top of box flush with the concrete pour. Using a hole saw, cut a 4 3/4" [121mm] diameter hole in the wood floor covering concentric with the opening in the top of the floor box. Install cover as shown below.

**NOTE:** A template is recommended to assure a desirable fit with the cover for thicker floor coverings. Use a 5" [127mm] diameter hole saw and remove a core from a steel or wood sheet with the same thickness as the required projection. Lay the template over the box and make cut flush with the template's surface.

### Activation – Single Service: Power/Low Voltage:

- 1. Use any Walker Systems 895 or 896 (brass or plastic activation).
- 2. Requires 881 Floor Box Adapter, Cat. No. 881ADP.
- **3.** Wiring capacity is noted by the first legible marking visible in the interior of the box.
- 4. Wire and fasten device (if required) and cover to adapter.
- 5. Push adapter and cover assembly into box opening no glue required!

#### Activation – Dual Service: Low Voltage Divider – Cat. No. 881DIV


- 1. Divider height is determined by the first legible letter visible in the interior of the box.
- **2.** Using a utility knife, score the groove in the divider just above the corresponding letter and snap apart.
- **3.** Wiring capacity of the box is reduced by the largest number indicated at the bottom of the divider.
- **4.** Slide the divider in set of grooves between the center and outer hubs.

### Activation Cover - Cat. No. 895DCC (For use on 881 Floor Box):


NOTE: This cover is UL Listed for use on carpet and wood covered floors only.

- 1. Wire and fasten device to adapter.
- **2.** Place duplex support plate (supplied with divider Cat. No. 881DIV) over receptacle.
- **3.** Attach cover over adapter with three #8-32 x 1/2" [12.7mm] screws.
- **4.** Remove 1/2" [12.7mm] screw plug and pull low voltage cables through opening.
- 5. Insert and push adapter and cover assembly into box opening no glue required!



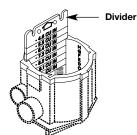

**Push Downward To Engage Teeth** 

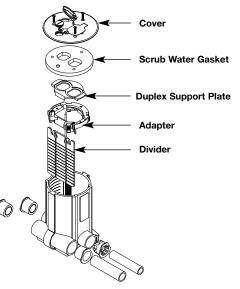



### Walker<sup>®</sup> Infloor Systems

#### Walker Systems, Inc.

U.S. 1000 Innovation Drive • Williamstown, WV 26187 1-800-240-2601 • FAX 800-254-5498 • Outside U.S.: 860-233-6251 Canada: 850 Gartshore Street • Fergus, Ontario N1M 2W8 1-800-741-7957 • FAX 519-843-5980








## Walker<sup>®</sup> Infloor Systems

# Ratchet-Pro<sup>™</sup> 881 PVC Floor Box 895DCC Cover

### INSTALLATION INSTRUCTIONS


### **Before Pour:**

- **1.** Locate box position. Orientation of duplex receptacle is aligned with the conduit.
- 2. Cement conduit closure plugs to unused ports and conduit reducers if reduction from the 1" [25mm] hubs is required.
- **3.** Secure box to grade or form using nails, screws, rebar and wire or other appropriate means.
- 4. Cement conduit feed to hubs/reducers.
- 5. Pour concrete to required height (2 1/4" to 6 1/2" [57mm to 165mm]).
- 6. If used for dual service, use the center hubs for power and the outer hubs for low voltage.

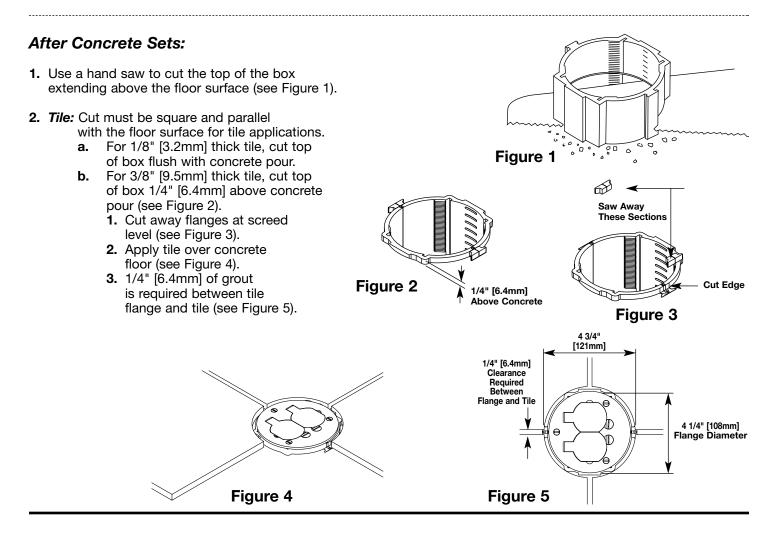

Walker<sup>®</sup> electrical systems conform to and should be properly grounded in compliance with requirements of the current National Electrical Code or codes administered by local authorities.

All electrical products may present a possible shock or fire hazard if improperly installed or used. Walker electrical products may bear the mark as UL Listed and/or Classified and should be installed in conformance with current local and/or the National Electrical Code.

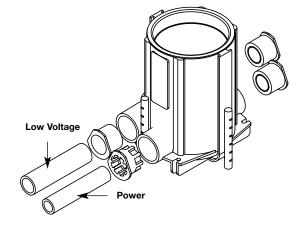

### After Concrete Sets Continued:

- **3.** *Carpet:* If floor covering is greater than 5/16" [7.9mm] thick, allow additional amount of the box to project above the floor to compensate. *Example: For 3/8*" [9.5mm] thick carpet and padding, subtract 5/16" [7.9mm] from 3/8" [9.5mm] and allow an additional 1/16" [1.6mm] of the box to extend above the floor surface.
- 4. When Installing Cat. No 895DCC on Wood Floor Covering: Cut must be square and parallel with the floor

Cut must be square and parallel with the floor surface. Cut top of box flush with the concrete pour. Using a hole saw, cut a 4 3/4" [121mm] diameter hole in the wood floor covering concentric with the opening in the top of the floor box. Install cover as shown below.

**NOTE:** A template is recommended to assure a desirable fit with the cover for thicker floor coverings. Use a 5" [127mm] diameter hole saw and remove a core from a steel or wood sheet with the same thickness as the required projection. Lay the template over the box and make cut flush with the template's surface.

### Activation – Single Service: Power/Low Voltage:

- 1. Use any Walker Systems 895 or 896 (brass or plastic activation).
- 2. Requires 881 Floor Box Adapter, Cat. No. 881ADP.
- **3.** Wiring capacity is noted by the first legible marking visible in the interior of the box.
- 4. Wire and fasten device (if required) and cover to adapter.
- 5. Push adapter and cover assembly into box opening no glue required!

#### Activation – Dual Service: Low Voltage Divider – Cat. No. 881DIV


- 1. Divider height is determined by the first legible letter visible in the interior of the box.
- **2.** Using a utility knife, score the groove in the divider just above the corresponding letter and snap apart.
- **3.** Wiring capacity of the box is reduced by the largest number indicated at the bottom of the divider.
- **4.** Slide the divider in set of grooves between the center and outer hubs.

### Activation Cover - Cat. No. 895DCC (For use on 881 Floor Box):


NOTE: This cover is UL Listed for use on carpet and wood covered floors only.

- 1. Wire and fasten device to adapter.
- **2.** Place duplex support plate (supplied with divider Cat. No. 881DIV) over receptacle.
- **3.** Attach cover over adapter with three #8-32 x 1/2" [12.7mm] screws.
- **4.** Remove 1/2" [12.7mm] screw plug and pull low voltage cables through opening.
- 5. Insert and push adapter and cover assembly into box opening no glue required!



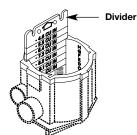

**Push Downward To Engage Teeth** 

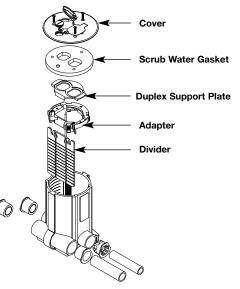



### Walker<sup>®</sup> Infloor Systems

#### Walker Systems, Inc.

U.S. 1000 Innovation Drive • Williamstown, WV 26187 1-800-240-2601 • FAX 800-254-5498 • Outside U.S.: 860-233-6251 Canada: 850 Gartshore Street • Fergus, Ontario N1M 2W8 1-800-741-7957 • FAX 519-843-5980



